



RAM-MAG1 Installation Instructions

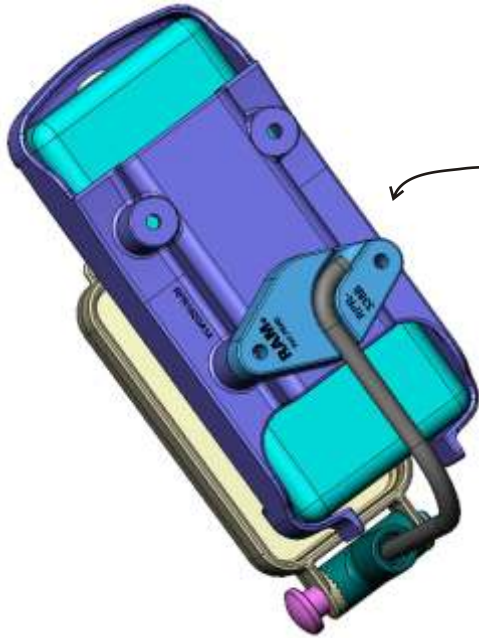

1. Slide the corrugated tube off the aluminum rod.

2. Put a slight bend at the end of the aluminum rod that closely matches the channel in the supplied diamond adapter. Once the bend has been made, the rod should fit into the channel with little or no overhang. Replace the corrugated tube.

3. Place piece that has a curved channel in between the base with ball and the cradle. The channel should be facing the base with ball.

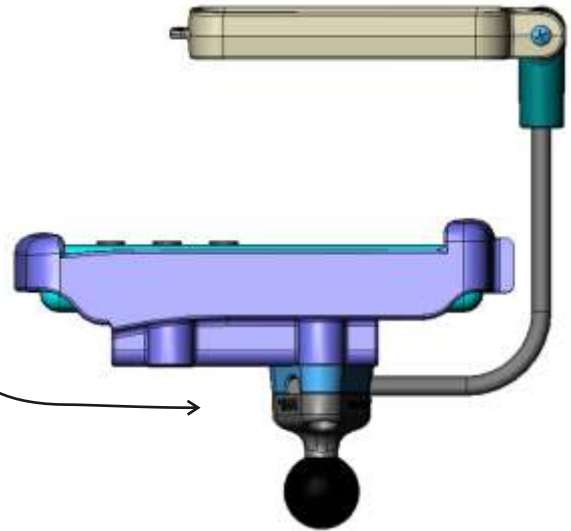

4. The MAG-1 comes with 4 screws and two nuts. Use the shorter of the screws if you are attaching to a plastic ball base and the longer screws if you are attaching to a metal ball base. Pull back the tubing to expose the knurled end of the rod previously bent and using the appropriate hardware, sandwich the rod in between the adaptor and cradle.

5. Tighten the hardware until snug, so that the rod is firmly held in place. Release the tubing so that it now rests against the adaptor.