

SPOT X®

USER GUIDE



TABLE OF CONTENTS

- WELCOME 1**
 - WHAT’S IN THE BOX?..... 1
 - CONFIGURING YOUR SPOT X 1
 - FULLY CHARGE YOUR SPOT X AFTER UNBOXING..... 1
- ACTIVATING YOUR SPOT X 1**
 - ACTIVATING YOUR SPOT X AND SELECTING A SERVICE PLAN 2
- SPOT X AT A GLANCE 3**
 - DEVICE OVERVIEW 3
 - MAIN MENU ACTIONS..... 3
- DEVICE OVERVIEW FUNCTIONS 4**
 - SPOT X DIRECTIONAL PAD 6
 - SCREEN LOCK..... 6
 - KEYBOARD AND DISPLAY BACKLIGHTING 6
- SPOT X APP AT A GLANCE..... 6**
 - CONNECT THE APP WITH YOUR MOBILE DEVICE 6
- GETTING STARTED 7**
 - IMPORTANT SPOT X TIPS 7
 - SPOT X OPERATING TEMPERATURES..... 7
- CONTACTS..... 8**
 - MANUALLY ADDING A CONTACT..... 8
 - DELETING A CONTACT 9
- 2-WAY MESSAGING 10**
 - CREATE & SEND A MESSAGE..... 10
 - PREDEFINED MESSAGES 11
 - SOCIAL MEDIA..... 11
 - VIEWING ALL MESSAGES 11
 - VIEWING INDIVIDUAL MESSAGES..... 12
 - DELETING INDIVIDUAL MESSAGE THREADS..... 12
 - REPLYING TO A MESSAGE..... 12
- CHECK IN 13**
 - SENDING A CHECK IN MESSAGE..... 13
 - HOW TO VIEW YOUR SENT CHECK IN MESSAGES..... 13
 - CANCEL MESSAGES..... 13
- SPOT S.O.V. (SAVE OUR VEHICLE)..... 14**
 - INITIATING SPOT S.O.V..... 14

S.O.S.....	15
INITIATING S.O.S.	15
CANCELLING S.O.S.	16
TRACKING.....	17
SELECTING A TRACKING INTERVAL.....	17
INITIATING TRACKING	17
CANCELLING TRACKING	18
SUSPENDED TRACKING MODE.....	18
MESSAGE FETCHING	19
SELECTING A MESSAGE FETCHING INTERVAL	19
MANUALLY FETCHING NEW MESSAGES	19
NAVIGATION	20
CALIBRATING THE COMPASS.....	20
TRIP INFORMATION DATA FIELDS.....	21
CONFIGURING TRIP INFORMATION DATA FIELDS	21
WAYPOINTS	22
CREATING A WAYPOINT	22
NAVIGATING TO A WAYPOINT.....	22
SYSTEM SETTINGS	23
VIEWING DATA USAGE	23
VIEWING SERVICE PLAN DETAILS	23
LANGUAGE SETTINGS.....	24
TIME AND DATE SETTINGS	24
DISTANCE UNIT SETTINGS.....	25
DISPLAY SETTINGS	25
SPOT X INFORMATION	25
RESTORE FACTORY SETTINGS.....	25
DEMO/RETAIL MODE	25
REGULATORY INFO	25
SOUNDS.....	26
SECURITY.....	26
MY ACCOUNT – MY DEVICES	27
SPOT X MY DEVICES OVERVIEW	27
DEVICE NAME TAB	29
TRACKING TAB	30
S.O.S. TEST MODE TAB.....	31
THIRD PARTY GPS FORWARDING TAB	32

DUPLICATE SETTINGS TAB.....	33
COPY DEVICE SETTINGS TO ANOTHER SPOT X.....	33
MOVEMENT ALERTS TAB.....	34
CONFIGURING MOVEMENT ALERTS	34
S.O.S. TAB.....	35
MY CONTACTS TAB	36
CREATE NEW CONTACT	36
CREATE NEW CONTACT GROUP.....	36
ADDING CONTACTS TO THE SPOT X	37
DELETING CONTACTS.....	37
SOCIAL MEDIA TAB	38
TWITTER.....	38
MESSAGE BLOCKER TAB.....	39
SELECTING A BLOCKING MODE	39
ADD TO THE BLOCK LIST	39
ADD TO THE ALLOW LIST.....	40
DELETE FROM THE BLOCK LIST	40
DELETE FROM THE ALLOW LIST.....	40
SPOT S.O.V. (SAVE OUR VEHICLE).....	41
SPOT S.O.V. ASSIST FEATURES	41
PREDEFINED MESSAGES TAB	42
CREATING A PREDEFINED MESSAGE	42
DELETING A PREDEFINED MESSAGE.....	42
EDITING A PREDEFINED MESSAGE	43
SYNCING PREDEFINED MESSAGES TO THE SPOT X.....	43
CHECK IN TAB	44
CONFIGURING THE CHECK IN MESSAGE.....	44
EDITING AN EMAIL ADDRESS OR MOBILE NUMBER	45
DELETING AN EMAIL ADDRESS OR MOBILE NUMBER.....	45
UNDELIVERED MESSAGE NOTIFICATION TAB.....	46
WAYPOINTS TAB	47
CREATING A WAYPOINT	47
DELETING A WAYPOINT	47
SYNCHING WAYPOINTS TO THE SPOT X	47
MY ACCOUNT – MAPS	48
TRACKING.....	48

MY ACCOUNT – SETTINGS & BILLING 49

OVERVIEW49

SPOT X MESSAGE USAGE 50

SYNCING SPOT X WITH MY ACCOUNT 51

SPOT X FIRMWARE UPDATE 51

SPOT X SPECIFICATIONS 52

CERTIFICATIONS 53

FCC COMPLIANCE STATEMENT 53

FCC PART 15 CLAUSE 15.21 - DO NOT MODIFY WARNING:..... 53

FCC REGULATORY..... 53

RÉGLEMENTATION DE LA FCC: 53

ISED RSS-GEN NOTICE 53

INDUSTRY CANADA CERTIFICATION..... 54

CANADA REGULATORY..... 54

RÉGLEMENTATION DU CANADA:..... 54

DECLARATION OF CONFORMITY FOR EUROPEAN CUSTOMERS..... 54

GENERAL WARNINGS..... 55

WELCOME

Thank you for purchasing your **SPOT X**. Now you can stay connected with family, friends, co-workers, and Search & Rescue services whenever you're off the grid.

WHAT'S IN THE BOX?

- SPOT X Device
- Strap and Carabiner
- 18" Micro USB Data/Power Cable
- Quick Start Guide
- Warranty Card
- S.O.S. Mirrored Sticker
- Important Safety & Product Information Guide
- Kickstand

FULLY CHARGE YOUR SPOT X AFTER UNBOXING

Connect the Micro USB Data/Power Cable to the SPOT X USB Data/Power Port and connect to either a computer or an AC Power Adapter. The battery with the lightning bolt ⚡ will be visible while charging.

Charging time is approximately 6 hours. Once the battery has been fully charged, a notification will pop up on the screen, and the USB Cable can be disconnected from the SPOT X. Make sure the USB cover is firmly sealed to ensure the device's waterproof capability.



ACTIVATING YOUR SPOT X

IMPORTANT: YOUR SPOT X REQUIRES AN ACTIVE SPOT SERVICE PLAN SUBSCRIPTION TO COMMUNICATE.

SPOT X FEATURES, INCLUDING **S.O.S.**, **WILL NOT WORK WITHOUT FIRST ACTIVATING YOUR DEVICE.**

IF YOU ENCOUNTER ISSUES DURING ACTIVATION, PLEASE VISIT **FINDMESPOT.COM/SPOTXSUPPORT** FOR ASSISTANCE.


CONFIGURING YOUR SPOT X

1. Power on the SPOT X by quick pressing the Power button.
2. You can start the configuration process by selecting your desired language, time and date setting and follow all onscreen instructions.
3. The device ESN and Auth code will now be displayed for your reference during activation.

ACTIVATING YOUR SPOT X AND SELECTING A SERVICE PLAN

1. Go to FindMeSPOT.com/Activate
2. New SPOT customers should select **Begin Activation** to create a new account. Existing SPOT customers should login to their current SPOT account and select **Add New SPOT Device**.

NOTE: ELECTRONIC SERIAL NUMBER (ESN), AUTHORIZATION CODE, AND MOBILE DEVICE NUMBER (MDN)

The ESN and Authorization Code can be found on the SPOT X device by selecting **System Settings**  and scrolling to and selecting SPOT X Info. The ESN can also be found on the bottom of your SPOT X retail box or on the back of your device. You will need both the ESN and Authorization code when setting up your **SPOT MY ACCOUNT**.

Your MDN will be assigned after you complete the **SPOT MY ACCOUNT** activation process. Share this number with others so they can message you directly!

3. Follow the onscreen instructions to create an account, choose a service plan and additional services for your SPOT X. Confirm your order to finish the **SPOT MY ACCOUNT** activation process.

SPOT X FIRMWARE UPDATE REQUIRED



ONCE YOU COMPLETE THE **SPOT MY ACCOUNT** ACTIVATION, MAKE SURE YOUR DEVICE IS UPDATED WITH THE LATEST FIRMWARE. SYNCING SPOT X WITH YOUR **SPOT MY ACCOUNT** WILL BE REQUIRED FOR SEVERAL FEATURES SUCH AS CONTACTS AND PREDEFINED MESSAGES TO APPEAR ON YOUR DEVICE.

VISIT [FINDMESPOT.COM/FIRMWARE](https://FindMeSPOT.com/Firmware) TO DOWNLOAD THE LATEST SPOT X FIRMWARE UPDATER.

SPOT X AT A GLANCE

DEVICE OVERVIEW

- 1 Power/Backlight Button
- 2 Power LED
- 3 Display Screen
- 4 S.O.S. Button
- 5 Directional Pad
- 6 Select Button
- 7 Track Button
- 8 Back Button
- 9 QWERTY Keyboard
- 10 USB Power/Data Port



MAIN MENU ACTIONS




- 1 Opens Messages Screen
- 2 Creates New Messages
- 3 Opens Contacts Screen
- 4 Sends Check In Message
- 5 Opens Track and Fetch Intervals Screen
- 6 Fetches New Messages
- 7 Opens Navigation Screen
- 8 Opens System Settings

DEVICE OVERVIEW FUNCTIONS

	BLINKING GREEN	BLINKING RED	NO LED
POWER LED	SPOT X is powered on and battery life is above 20%.	SPOT X is powered on and battery life is below 20%.	SPOT X has either entered power saving mode due to no button press or the unit is powered off.
POWER BUTTON	Press the Power button to power on the SPOT X. Long press the Power button for 3 seconds to power OFF.		While the SPOT X is powered ON, quick press the Power button to toggle the screen and keyboard backlight on and off.
S.O.S. BUTTON	Long press the S.O.S. button for 3 seconds or until the S.O.S. screen is displayed to initiate with search and rescue services.		While S.O.S. is active, long press the S.O.S. button for 3 seconds to cancel the S.O.S. initiation.
TRACKING BUTTON	Long press the Track button for 3 seconds to initiate tracking mode at your set interval rate.		While Tracking Mode is active, long press the Track button for 3 seconds to cancel Tracking.
DIRECTIONAL PAD	Press up, down, left and right to navigate to and highlight a section on the screen.		Press the Select button to make a selection.
BACK BUTTON	Quick press the Back button to navigate to the previous screen.		Press and hold the Back button to go back to the Main Menu screen.
QWERTY KEYPAD	Use the keyboard to create messages, contact names and other manual entries as required.		
DISPLAY SCREEN	The SPOT X Display screen allows for interaction with the Main Menu, sub-menus, and other onscreen features.		
USB POWER/ DATA PORT	Used to connect a Micro USB Cable to the SPOT X USB Port to charge the SPOT X device and to sync with SPOT MY ACCOUNT .		

STATUS BAR ICONS

BATTERY

-  Battery Strength
-  Low Battery
-  Battery Charging





GPS SIGNAL

- GPS** GPS Signal Available
- GPS X** GPS Signal Unavailable



DEVICE

-  Sync Required

MESSAGES

-  New Received Messages
-  Fetching New Messages
-  Pending Queued Messages
-  Sending Check In Message

MODES





- S.O.S.** S.O.S. Active
-  Tracking Active
-  Suspended Tracking

TIME



- 5:00 PM** 12-Hour Format
- 17:00** 24-Hour Format

MENU DISPLAY ICONS





MESSAGES

-  Create New Message
-  Send Message
-  Reply to Message
-  Predefined Messages




CONTACTS

-  Contact List
-  Create New Contact





GPS

- ☒  Include Elevation with Message
- ☒  Include GPS Coordinates with Message
-  Create New Waypoint
-  Navigate to Location





OTHER

-  Delete
-  Save
-  Back
- 1/3** Content Count (current/total)

CONTACTS

-  Email Contact
-  Mobile Contact
-  Group Contact
-  Twitter


SENT MESSAGE STATUS

-  Message Delivered
-  Message Failed
-  Message Sent to Queue
-  Message Sent - Delivery Unconfirmed

SPOT X DIRECTIONAL PAD

The SPOT X Main Menu screen displays icons/buttons that you can select to send messages, activate navigation, and manage other features. After making an initial selection, sub-menu screens may be displayed.

Use the Directional Pad (Up – Down – Left – Right) to highlight your selection and then press the **Select** button. Use the Back button to cancel or go back to the previous screen.

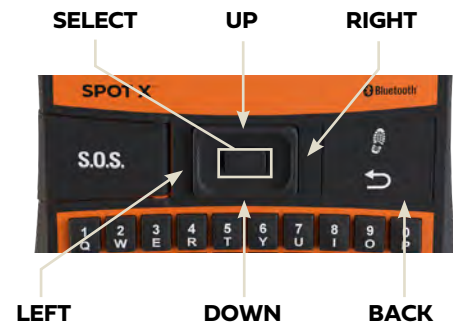


SCREEN LOCK

To prevent the accidental transmission of data, you can enable the screen lock feature on the SPOT X.

Simply press the **Up** key followed by the **Select** button. To disable the screen lock, press the **Up** key followed by the **Select** button.

KEYBOARD AND DISPLAY BACKLIGHTING

Press the **Power/Backlight Button** to turn on/off keyboard and screen illumination.

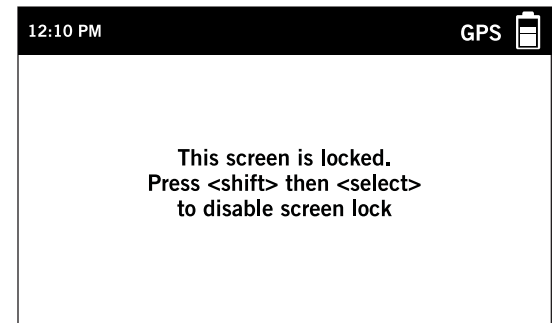

SPOT X APP AT A GLANCE


CONNECT THE APP WITH YOUR MOBILE DEVICE

1. Install the **SPOT X App** from your mobile device app store.
2. Enable Bluetooth on your mobile device (Spot X's Bluetooth is always discoverable).
3. Place the SPOT X and the mobile device within 10 feet (3 meters) of each other.
4. Open the SPOT X App.
5. Login using your SPOT My Account username & password.
6. Select your SPOT X (ex: **SXB2970000**).

GETTING STARTED

IMPORTANT SPOT X TIPS

- ▶ SPOT X needs a clear view of the sky with no obstructions (buildings, roof overhangs, trees, etc.) to obtain a GPS signal to provide the most accurate location information and send messages. SPOT X may not function properly at the bottom of a deep canyon, in a cave, or in very dense woods.

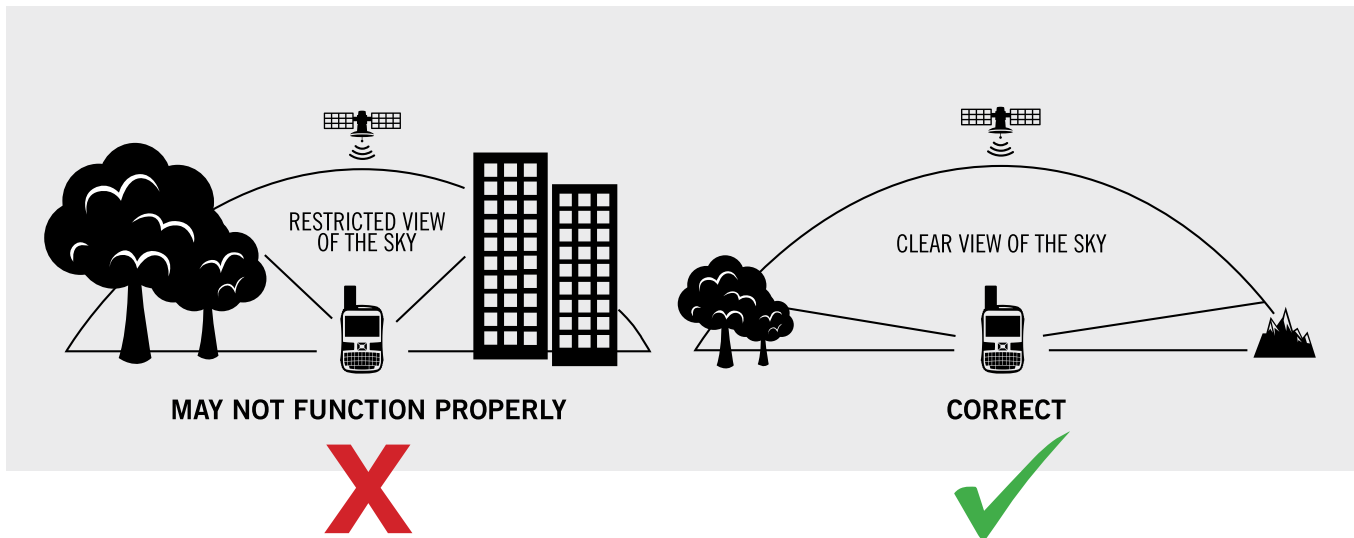

- ▶ Orienting SPOT X vertically with the **antenna facing towards the sky** will improve performance as the antenna is located on the top portion of the device.
- ▶ Since SPOT X has the ability to receive messages, messages sent from the device can be acknowledged shortening the transmission time.
- ▶ Before heading off the grid, we strongly recommend that you send a test message to ensure your device was activated properly. You can view your sent messages in your account at **FindMeSPOT.com/MyAccount**

NOTE: If no GPS signal is found the ^{GPS} **X** will display on the screen. If possible, you should move to a location with a clearer view of the sky. You can check the status of your messages in the message thread.

SPOT X OPERATING TEMPERATURES

Prolonged use or storage of your SPOT X in direct sunlight or in a vehicle may cause the device to overheat and/or damage its battery. SPOT X can withstand operating in temperatures of -4°F to +140°F (-20°C to +60°C).




CONTACTS

SPOT X can hold up to 70 contacts and/or contact groups. Contacts can be manually added through the SPOT X or through **SPOT MY ACCOUNT**. If added through **SPOT MY ACCOUNT**, syncing is required using the SPOT X Firmware Updater in order for the contacts to display on the SPOT X.


Contacts supported:

-  Mobile Number
-  Email
-  Contact Groups


MANUALLY ADDING A CONTACT


1. On the **Main Menu** screen, select  to display the contacts list.
2. On the **Contacts** screen, select  to display the **New Contact** screen
3. Enter the required information and select  to save the contact to your SPOT X device.



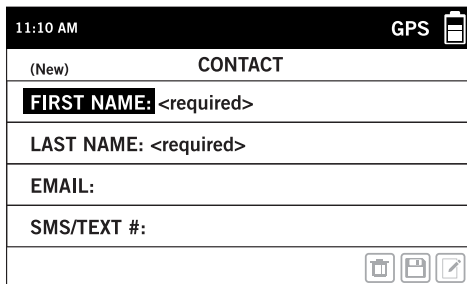

If both **Email** and **SMS/TEXT** fields are filled in, the SPOT X will create two separate contacts, one for each field.



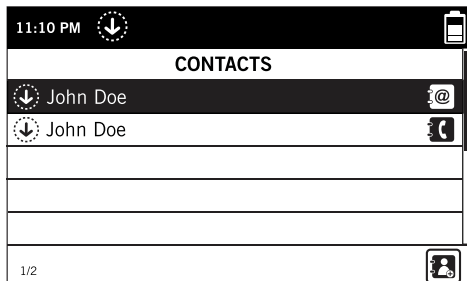

CONTACT	
(New)	
FIRST NAME:	<required>
LAST NAME:	<required>
EMAIL:	
SMS/TEXT #:	



4. Additionally, the sync required icon  will appear next to the new contact's name and in the **Status Bar**. This indicates that the SPOT X will need to sync with **SPOT MY ACCOUNT** if you would like the contact to be uploaded to your contact list in **SPOT MY ACCOUNT**.







CONTACTS	
 John Doe	
 John Doe	

NOTE: Contacts can also be saved when typing a message. To do this, select **New SMS Contact or New email Contact**, then enter the information and the  will be highlighted. Select the icon and enter the appropriate information and select  and press the **Select** button to save the contact to your SPOT X device.

DELETING A CONTACT

1. On the **Main Menu** screen, select  and then scroll down and highlight the contact you want to delete. Press the **Select** button.
2. Select  to delete the contact and follow the onscreen instructions to remove it from your SPOT X device permanently.
3. Additionally, if the SPOT X device had been previously synced with **SPOT My Account** and the contact was present in both locations, once a new sync is performed the deleted contact will be also removed from the contact list in **SPOT My Account**.



11:10 AM	GPS 
(New)	CONTACT
FIRST NAME:	John
LAST NAME:	Doe
EMAIL:	john.doe@findmespot.com
SMS/TEXT #:	
  	

11:10 AM 	GPS 
ARE YOU SURE YOU WANT TO DELETE THIS CONTACT?	
YES	NO



2-WAY MESSAGING

Send and receive 140 character text messages and emails with family and friends from virtually anywhere in the world. SPOT even provides you with your own mobile device number so others can reach you anytime.

CREATE & SEND A MESSAGE

1. On the **Main Menu** screen, select  and the message composing screen will be displayed.
2. Select  to add contacts.

NOTE: When sending a message to more than one person, the contacts will have to be added individually.




3. Once you have selected a contact, select the **Message:** field to display the **New Message** screen. Enter a message of up to 140 characters and select **Done**. You can include your **Elevation** and/or **GPS Coordinates** by clicking on the box next to the  and  icons.

NOTE: The altitude will not be displayed on the device, but the recipient will receive this information. Additionally, the SPOT X does not support displaying altitude from messages.

4. Select  to send your message.


OR

1. On the **Main Menu** screen, select  and the message composing screen will be displayed. Then follow steps 3-4 from the instructions above.

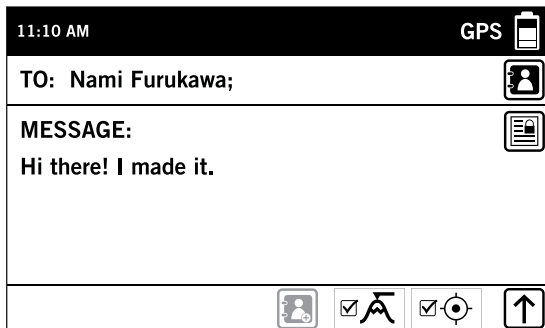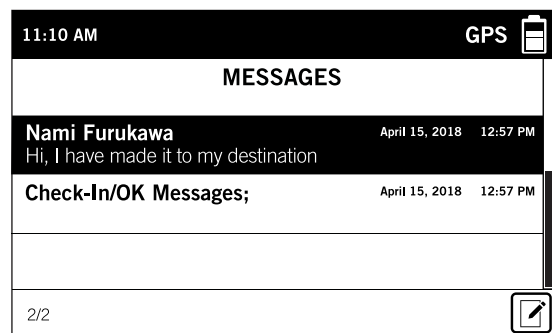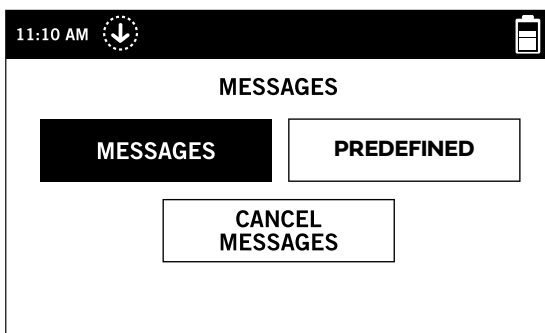

PREDEFINED MESSAGES

Make messaging even easier by sending a Predefined Message. These messages can only be edited in your **SPOT MY ACCOUNT** and up to 14 Predefined Messages can be stored on your SPOT X. Syncing SPOT X with your **SPOT MY ACCOUNT** is required for Predefined Messages to appear on your device.


To send a Predefined Message, simply create a new message and select the **Predefined Messages** button .

Syncing your SPOT X with SPOT My Account is required for the changes to reside on your SPOT X.


SOCIAL MEDIA

Link your **social media** accounts to your SPOT X directly from your **SPOT My Account**.

Once you've linked your accounts, you will be able to send 140 character updates to those accounts from your SPOT X at any time. Syncing SPOT X with your SPOT account is required for social media to appear as a contact on your device.

Simply create a new message, select  to access your contact list, and choose your linked social media as a contact.


VIEWING ALL MESSAGES

1. On the **Main Menu** screen, select  to display the main Messages screen, then select **Messages** to view all of your message threads.
2. Highlight and select the message thread you wish to open.




VIEWING INDIVIDUAL MESSAGES


To view the entire message, highlight and select the message you want to see. The content counter indicates the selected message position in the list.

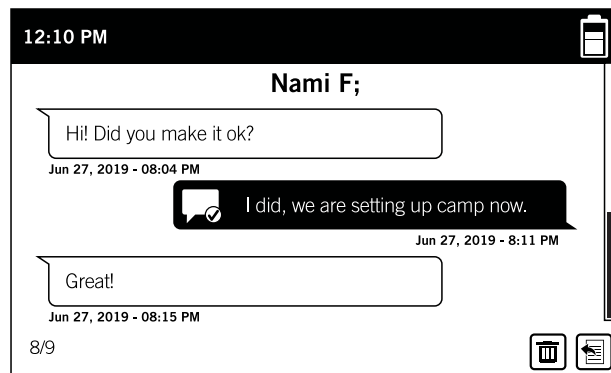

DELETING INDIVIDUAL MESSAGE THREADS

To delete the individual message thread, go to the thread and select  and follow the onscreen instructions.

REPLYING TO A MESSAGE


To reply to the message, go to the thread and select  .


CHECK IN

Check in with friends and family by quickly sending a pre-programmed message and/or email along with your GPS coordinates. The Check In message will include a link to a map showing the SPOT X's location. Make sure you set up this feature before you go off the grid.


The Check In message can be edited and assigned to contacts via **SPOT MY ACCOUNT** at any time.

SENDING A CHECK IN MESSAGE

On the **Main Menu**, select  and the pre-programmed message created in **SPOT MY ACCOUNT** will automatically be sent to the pre-assigned contacts in your Check In contact list.

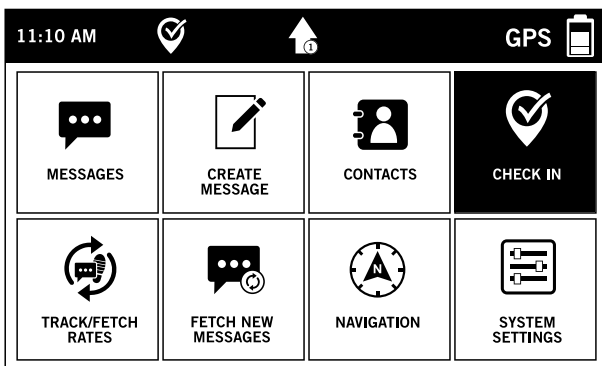


HOW TO VIEW YOUR SENT CHECK IN MESSAGES


1. On the **Main Menu** screen, select  to display the Message screen, and then select **Messages**.
2. On the list of messages, select the **Check In**.
3. Select the **Check In** message you would like to view.

NOTE: The Check-In Message will not display the texts sent, but only the GPS coordinates and date/time it was sent.

CANCEL MESSAGES

Cancels all outbound Check In and other messages that are queued up.

1. On the **Main Menu** screen, select  and then select **Cancel Messages**.
2. A message will be displayed asking if you want to cancel all pending outbound messages. Select **Yes** or **No**.

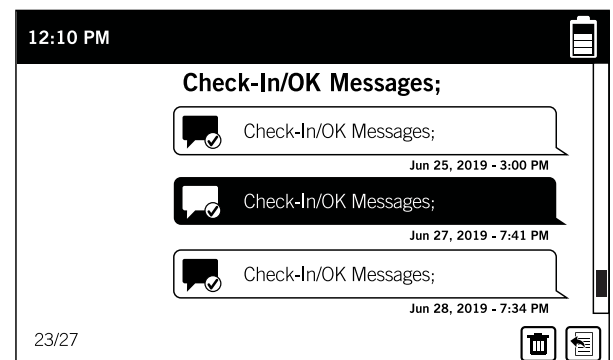






SPOT S.O.V. (SAVE OUR VEHICLE)

SPOT S.O.V. can be used during non-life threatening situations and allows you to send 2-Way text messages to Nation Safe Drivers. SPOT S.O.V. services provided by Nation Safe Drivers, are only available to subscribing customers in the U.S., Puerto Rico, Washington, D.C. and Canada.


Visit **FindMeSPOT.com/SPOTSOV** to learn more.








INITIATING SPOT S.O.V.

If Nation Safe Drivers service was added to the plan, this contact will automatically be listed under the SPOT X contact list.

1. On the **Main Menu** screen select  to display the main Message screen, then select **Messages**.
2. Select .
3. Select **Nation Safe Drivers** from your contact list.
4. Select the **Message** field to display the New Text screen. From here you can choose to create a new message. Select **Done** to continue.
5. Include your Elevation by checking next to ☒  and/or include your GPS Coordinates by checking next to ☒ .
6. Select  to send your message.

OR

1. On the **Main Menu** screen select  and the message composing screen will be displayed. Then follow steps 3-6 from the instructions above.

11:10 AM	GPS 
TO: Nation Safe Drivers;	
MESSAGE: I have a flat tire. Please send a tow truck	
<div> <input checked="" type="checkbox"/>  <input checked="" type="checkbox"/>  </div>	

S.O.S

IMPORTANT NOTICE: S.O.S. MODE SHOULD ONLY BE USED DURING LIFE THREATENING EMERGENCIES. SENDING FALSE S.O.S. MESSAGES MAY SUBJECT YOU TO LIABILITY FOR ADDITIONAL CHARGES.


Activate the S.O.S. mode to begin communicating and sending alerts directly to search and rescue services. The emergency response center will notify the appropriate emergency responders based on the SPOT X's GPS location and your emergency situation. Responders may include local police, Coast Guard, or search and rescue teams.

INITIATING S.O.S.

1. Power on device, lift cover, long press the S.O.S. button for 3 seconds or until S.O.S. screen is displayed, and follow the onscreen instructions.
2. The **S.O.S.** icon should appear on the **Status Bar** to indicate that S.O.S. has been initiated.




3. Once S.O.S. is initiated, search and rescue will be notified of your emergency. SPOT will continuously send S.O.S. notifications with your GPS position to the emergency response center every 5 minutes until S.O.S. is cancelled or the SPOT X is powered off.
4. SPOT X will then allow you to communicate 2-Way, via message, with search and rescue by selecting the **S.O.S. TEXT** button

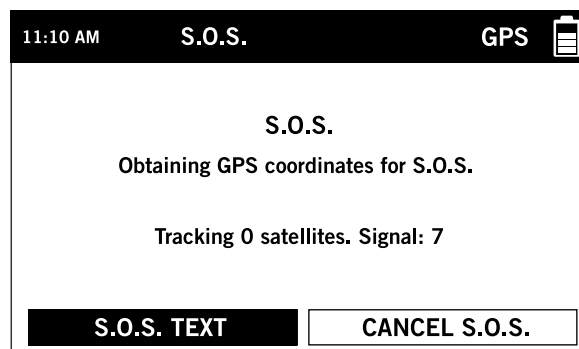

5. Upon activating S.O.S., the device will terminate all previously queued messages waiting to be transmitted as well as Navigation, Check In, and Tracking if active. The SPOT X device will be locked down on S.O.S. Mode and you will not be able to send messages to anyone other than the emergency response center until S.O.S. is cancelled.
6. While S.O.S. is active, the SPOT X should remain outside in clear view of the sky with no obstructions in order to maintain network connectivity.

CANCELLING S.O.S.

Lift cover, long press the S.O.S. button for 3 seconds and follow the onscreen instructions, or select Cancel S.O.S. from the S.O.S. screen.

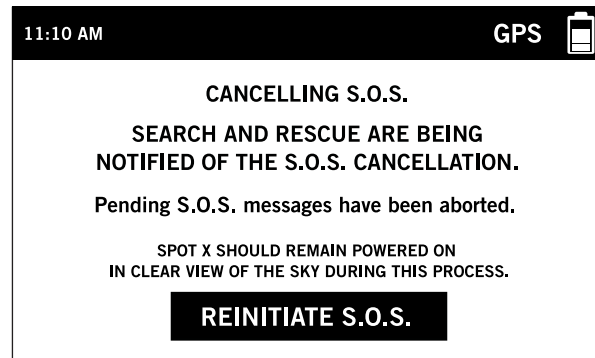


TRACKING



With SPOT X, your friends and family can track your progress in near real-time using the **Shared View** giving them a virtual breadcrumb trail of your adventure.

SELECTING A TRACKING INTERVAL

The SPOT X default tracking interval is 10 minutes. Depending upon your service plan, you can select from tracking intervals of 2½, 5, 10, 30, or 60 minutes.

NOTE: If Basic Service plan was selected for your SPOT X subscription, tracking will have to be reset after 24 hours. To have continuous 24-hour tracking, your service plan must be upgraded.

On the **Main Menu**, select , then scroll to and select **Current Tracking Interval** and choose from the list of available intervals. All non-subscribed tracking intervals will be grayed out.

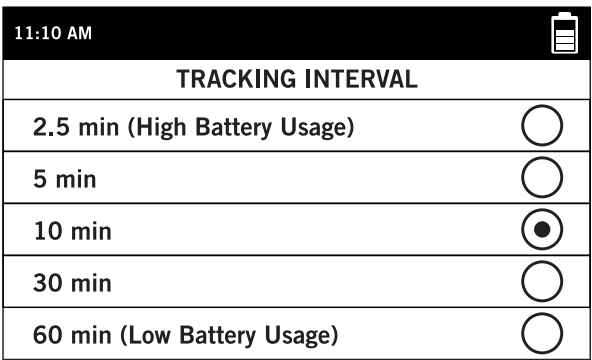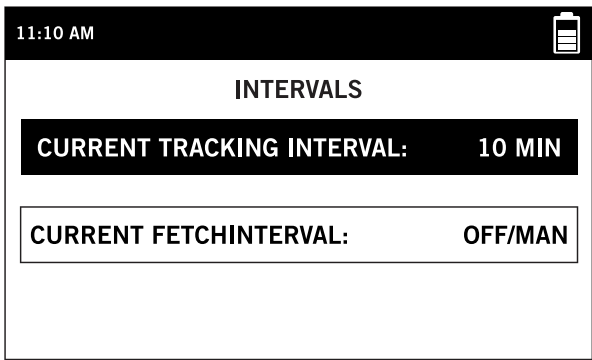


INITIATING TRACKING

1. Power on the SPOT X and long pressthe Track button  on the SPOT X device for 3 seconds or until the tracking icon  appears in the **Status Bar**.




Track Button

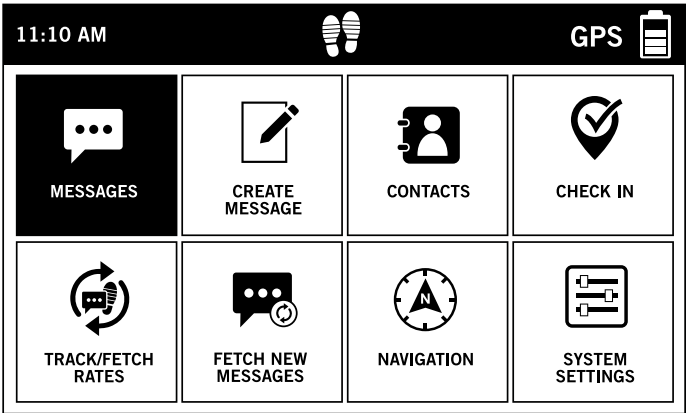


2. Once your GPS position is acquired, SPOT X will send your tracks in accordance with the tracking interval you have selected until you manually stop tracking, the SPOT X detects no movement, or you power off the SPOT X device.
3. While Tracking is active, SPOT X should remain outside in clear view of the sky with no obstructions in order to maintain network connectivity.

CANCELLING TRACKING

Long press the Track button  on the device for 3 seconds and the track icon will disappear from the **Status Bar**.



SUSPENDED TRACKING MODE

SPOT X only sends tracks when Tracking mode is active and the device is moving. When the device is stationary for more than **5** minutes, SPOT X will enter **Suspended Tracking** mode and you will see  in the **Status Bar**.

SPOT X will automatically send one more track from your resting location. While at rest, SPOT X will not send tracks. Tracking will automatically resume after the accelerometer detects the unit has begun moving again.



MESSAGE FETCHING

Every time SPOT X sends a track and/or a message, SPOT X will also retrieve and download any incoming messages. When you're not Tracking or sending a message, the Message Fetching function will check for messages for you.



SELECTING A MESSAGE FETCHING INTERVAL


The SPOT X default message fetching interval is Off/Manual Fetching. Depending upon your service plan, you can select from fetching intervals of 2½, 5, 10, 30, 60 minutes, 4 hrs, 24 hrs, or Off/Manual fetching.

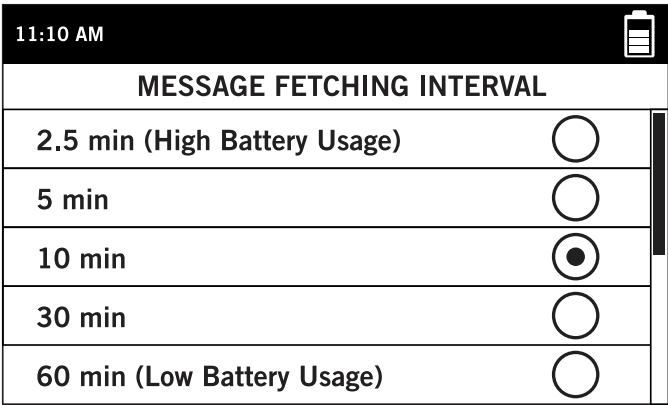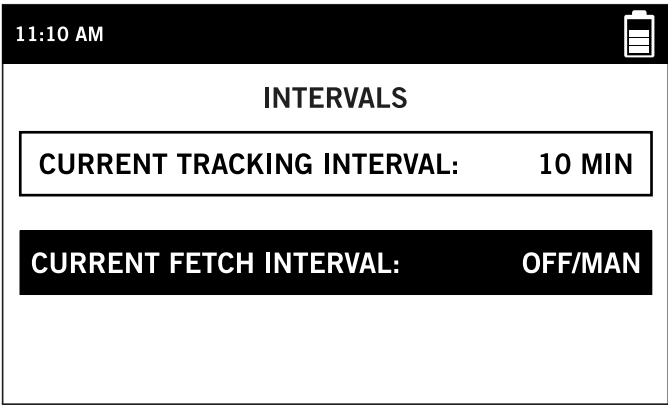On the **Main Menu**, select , then scroll to and select **Current Fetch Interval** and choose from the list of available intervals. All non-subscribed fetching intervals will be grayed out.




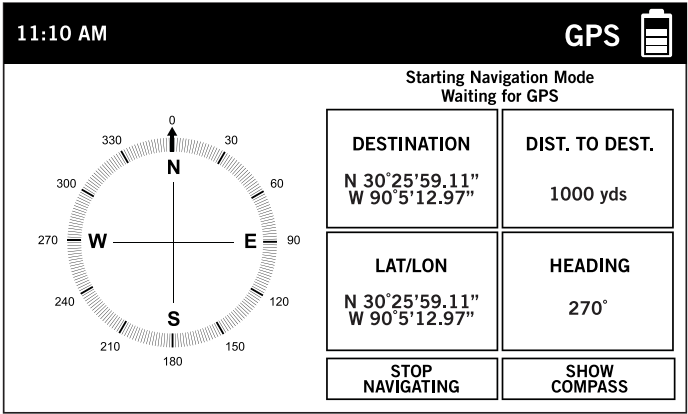
MANUALLY FETCHING NEW MESSAGES

To manually check for new incoming messages, simply select  from the **Main Menu** screen. If any new incoming messages are received,  will be displayed in the **Status Bar** letting you know how many new messages are waiting for you.

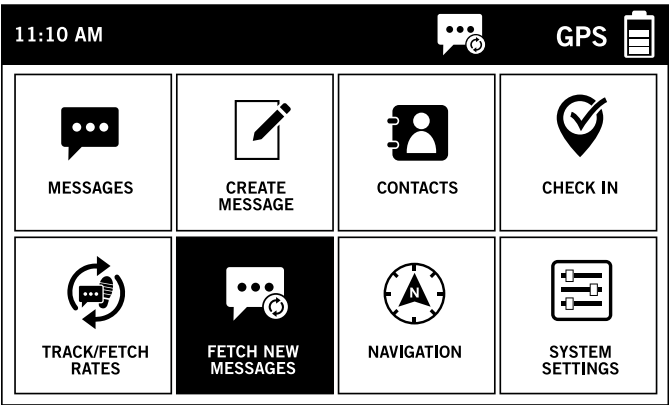


NAVIGATION

SPOT X has a built-in compass that comes with several navigational features and trip information to help you navigate. To access the **Compass** from the **Main Menu** screen, select  followed by **Compass**.



CALIBRATING THE COMPASS

Your SPOT X uses a Digital Compass to give accurate Heading and Bearing information. The SPOT X automatically checks compass calibration and will tell you to calibrate when necessary.

1. On the **Main Menu**, select  then select **Settings** and scroll to and select the **Calibrate Compass** button.
2. The **Calibrate Compass** screen will be displayed. Select **Start Calibration** to begin and follow the onscreen instructions.

NOTE: Use the figure 8 movement to calibrate the unit.

TRIP INFORMATION DATA FIELDS


The SPOT X Compass screen is able to display four Trip Info Data Fields at a time. Each data field can be easily configured and changed by selecting from seven different choices:

- Location (Lat/Lon)
- Destination (Lat/Lon)
- Distance to Destination
- Heading
- Bearing
- Course
- Elevation
- Speed

CONFIGURING TRIP INFORMATION DATA FIELDS

1. On the **Compass** screen, select Trip Info. If a calibration has never been done before, the **Calibrate Compass** screen will be displayed. Select **Start Calibration** to begin and follow the onscreen instructions.
2. Using the **Navigation Pad**, highlight and select the Data Field you wish to change.
3. The **Trip Info Data Field** screen will be displayed. Highlight and select the appropriate navigational data you wish to be displayed in that field.

11:10 AM

GPS

TRIP INFORMATION



<div>Lat/Lon</div> <div>N30.25'59.1" W90.5'13.0"</div>	<div>Destination</div> <div>N30.25'59.1" W90.5'13.0"</div>	<div>Dist. to Dest.</div> <div>13.179 M</div>	<div>Heading</div> <div>104.875</div>
<div>Bearing</div> <div>153.405</div>	<div>Course</div> <div>152.49</div>	<div>Elevation</div> <div>19.399 M</div>	<div>Speed</div> <div>0 KPH</div>


Stop Navigating





WAYPOINTS


SPOT X allows you to designate important locations and landmarks as Waypoints on your device and navigate to them.

CREATING A WAYPOINT

1. On the **Main Menu** screen, select  then select **Waypoint** followed by  to create a new waypoint.
2. Select either:
 - **Current Location** – creates a new waypoint based on the current GPS coordinates of the SPOT X
 - **Create Waypoint** – creates a new waypoint by manually entering GPS coordinates
 - The **Waypoint** screen will be displayed. If **Current Location** was selected, the Location field will input the current GPS coordinates automatically. If **Create Waypoint** was selected, the GPS coordinates will have to be input manually.

11:10 AM GPS 	
NEW WAYPOINT	
CURRENT LOCATION	CREATE WAYPOINT

11:10 AM GPS 	
NAME:	Home
LOCATION:	30.44 -90.08
ELEVATION:	5
NOTES:	
  	

3. To change the name of a waypoint, enter your selected waypoint name in the **Waypoint Name** field.
4. Selecting the **Notes** field will display the **Waypoint Notes** screen allowing you to enter up to 300 characters. Select **DONE** to save the notes.
5. When finished, select  to save the waypoint.

NAVIGATING TO A WAYPOINT

1. On the **Main Menu** screen, select  then select **Waypoint** and chose the specific waypoint you'd like to travel towards.


NOTE: For best results, while navigating, hold the SPOT X with the antenna at about a 135 degree angle.


2. The selected **Waypoint** screen will be displayed. Select the **Navigate To** button.
3. The **Compass** screen will appear displaying the Compass and the following Data Fields:
 - **Destination** – with the selected Waypoint coordinates
 - **Distance to Destination** – in a straight line
 - **Lat/Lon** – current GPS location
 - **Course** – direction towards selected Waypoint

SYSTEM SETTINGS

From the System Settings screen, you can manage all different aspects of your SPOT X device from viewing your data usage to selecting your preferred language.

VIEWING DATA USAGE

The Data Usage screen allows you to monitor your SPOT X data usage and your SPOT X Service Plan details. On the **Main Menu** screen, select  then scroll to and select **Data Usage**.

11:10 AM 	
DATA USAGE SINCE: May/06/18 12:00 PM	
OUTGOING TEXTS:	000000
INCOMING TEXTS:	000000
OUTGOING PREDEFINED TEXTS:	000000
OUTGOING TRACKS:	000000
RESET DATA	PLAN DETAILS

The **Data Usage** screen displays the following:


- Total messages sent since the last data reset
- Total incoming messages since the last data reset
- Total outgoing predefined Messages
- Total outgoing tracks since the last data reset

Selecting the **Reset Data** button will erase and reset all counters to zero.

VIEWING SERVICE PLAN DETAILS

Selecting **Plan Details** allows you to see the **Service Plan Details** screen displaying the following:

- Current SPOT X Service Plan name
- The number of Free Predefined Messages
- The number of included messages for the active SPOT X Service Plan
- The minimum tracking interval for the active SPOT X Service Plan
- The cost per message you will be charged if you go over your allotted messages

11:10 AM 
SERVICE PLAN DETAILS
SpotX Annual
UNLIMITED Predefined Messages
UNLIMITED Text/SMS Messages
Unlimited 10 min Tracking Intervals
0 per Text/SMS Message

LANGUAGE SETTINGS

You can change the language setting on your SPOT X to one of the following:

- English
- Español
- Français
- Português
- Italiano
- Deutsch

11:10 AM

LANGUAGE SELECTION

ENGLISH

☒

ESPAÑOL

☐

FRANÇIAS

☐

PORTUGUÊSE

☐

TIME AND DATE SETTINGS

The Time/Date Settings screen allows you to configure how the time and date are displayed on your SPOT X device.

Select **Time Format** and choose between 12 hour or 24 hour format.

Select **Set Time/Date** to manually set the time and date displayed on your SPOT X device.

11:10 AM

TIME/DATE SETTINGS

TIME FORMAT

SET TIME/DATE

11:10 AM

TIME FORMAT

12 HOUR

☐

24 HOUR

☒

11:10 AM

TIME/DATE SETTINGS

TIME FORMAT

SET TIME/DATE

11:10 AM

SET TIME/DATE

DATE: (YYYY/MM/DD)

20

1

8

0

2

2

4

TIME: (HH:MM)

0

9

:

4

4

AM

☒

PM


☐

SAVE

DISTANCE UNIT SETTINGS

The Distance Unit screen allows you to configure the SPOT X display measurements by selecting from the follow options:




- Metric (Meters)
- Imperial/US (Feet)
- Nautical

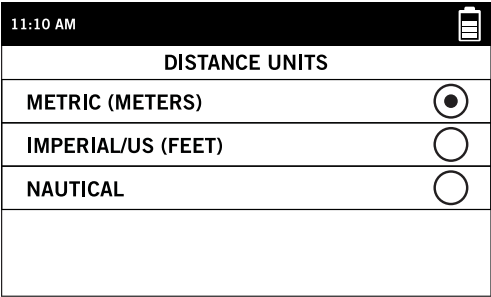

DISPLAY SETTINGS

The Display Settings screen allows you to configure the SPOT X to turn on or turn off the Poor Sky View Warning, Antenna Position Warning as well as Invert Display.

- The Poor Sky View Warning: The warning will be displayed when there are incoming messages that are not fully received after 5 minutes.
- Antenna Position Warning: The warning will be displayed when the SPOT X is not being held upright.
- Invert Screen Display: This function will switch the background to black and the white text.

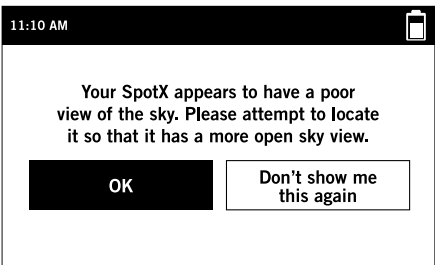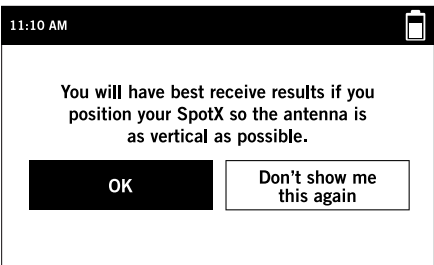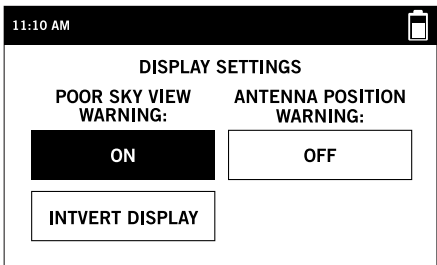

SPOT X INFORMATION

The **SPOT X Information** screen allows you to see the following SPOT X information:

- SPOT X Unique Mobile Device Number
- ESN
- Auth Code
- Firmware Version
- Date of last My ACCOUNT Sync

SPOTX INFORMATION	
MDN:	12544601271
ESN:	0-2901462
AUTH CODE:	1111
FIRMWARE:	00002A-001003-010017-000010
LAST SYNC:	2018-05-04 8:00:00

RESTORE FACTORY SETTINGS

The **Restore Factory Settings** screen resets the SPOT X to its default factory settings.

NOTE: Resetting the SPOT X to the out-of-the-box Factory Settings will erase all data on the SPOT X including all contacts, account information, waypoints, and message threads.

DEMO/RETAIL MODE

Enabling Demo/Retail Mode causes the SPOT X to display preset marketing images when the device is powered off.

REGULATORY INFO

The Regulatory Information shows the manufacturer, model and certifications.

SOUNDS



This screen will allow you to turn on or off incoming message sounds, and to select if the sound repeats until acknowledged.

- Short Single (default)
- Short Repeating - repeats every five minutes until acknowledged
- Long Single – higher pitch tones for noisier environments
- Long Repeating – repeats every five minutes until acknowledged

11:10 AM	
SOUNDS	
OFF	<input type="radio"/>
SHORT SINGLE	<input type="radio"/>
SHORT REPEATING	<input type="radio"/>
LONG SINGLE	<input checked="" type="radio"/>
LONG REPEATING	<input type="radio"/>

SECURITY

Security allows to add a password or PIN to secure your device. Selecting PIN simply locks the keyboard in number entry mode. The password or PIN can be 4-12 characters in length.


When password/PIN is enabled, pressing the  key followed by the **Select** button will lock an unlocked SPOT X, and then when locked, the  key followed by the **Select** button will prompt for a password/PIN.

NOTE: If you forget the password/PIN, simply connect the USB cable to your SPOT X and plug into a USB port on your computer. Then click on Connect.

SPOT MY ACCOUNT

Your **My Account** website is a quick and easy way to configure SPOT X.

NOTE: Select the Edit Settings button to view the SPOT X device overview.

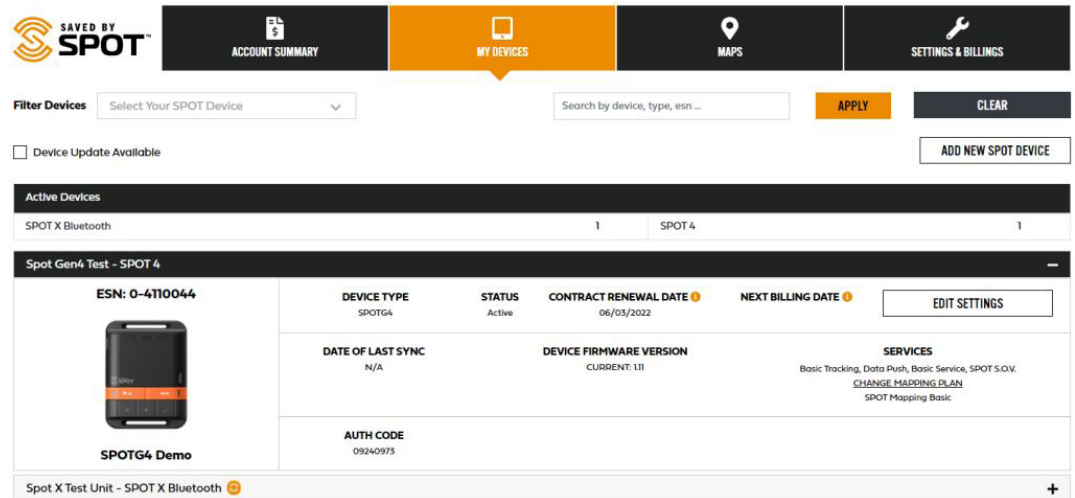


From My Account you can access the following:

- My Devices
 - ▶ Enable/Disable Movement Alerts
 - ▶ Duplicate SPOT X Settings
 - ▶ Edit S.O.S. Emergency Contacts
 - ▶ Create and Manage Contacts
 - ▶ Configure Help/SPOT Assist
 - ▶ Configure Social Media Accounts
 - ▶ Configure Message Blocker
 - ▶ Create and Edit Predefined Messages
 - ▶ Configure Check In/OK
 - ▶ Enable/Disable Undelivered Message Notifications
- My Locations
- Share
- Setting & Billing

MY ACCOUNT – MY DEVICES

SPOT X MY DEVICES OVERVIEW

- **ESN** - Displays Electronic Serial Number that identifies the SPOT X
- **Mobile Device Number** - Displays telephone number assigned to the SPOT X
- **Device Swap** - Used to transfer service from one SPOT X to another SPOT X
- **Device Type** - Displays the SPOT device type, i.e. SPOT X
- **Status** - Displays whether the device is Active or Suspended
- **Contract Renewal Date** - Displays the date the SPOT X service plan will automatically be renewed
- **Date of Last Sync** - Displays the date the SPOT X was last synced
- **Device Firmware Version** - Displays the SPOT X current firmware version
- **Service Plan** - Displays the SPOT X service and SPOT Mapping plan
- **Auth Code** - Displays the Auth Code that identifies the SPOT X

SPOT X - SPOTXB			
<div>ESN: 0-2970243</div> <div>MOBILE DEVICE NUMBER:12542401147</div> <div>DEVICE SWAP</div> <div></div> <div>SPOT X Bluetooth D</div>	DEVICE TYPE SPOTXB	STATUS Active Pay now	CONTRACT RENEWAL DATE 05/12/2022
	NEXT BILLING DATE		
	DATE OF LAST SYNC 9/20/21, 6:36 PM	DEVICE FIRMWARE VERSION CURRENT: 020500-010305-010300-010604-000003	SERVICES Basic Tracking, Data Push, Unlimited Tracking, Extreme Tracking CHANGE MAPPING PLAN SPOT Mapping Enterprise
	AUTH CODE 57581047		
SPOTXB User Guide SPOTXB Quick Start Guide			GETTING STARTED ADD ADDITIONAL SERVICE

- **Device Name Tab** – Used to change the name of the SPOT X
- **Tracking Tab** – Displays the tracking interval available in accordance with the current SPOT X Service plan
- **S.O.S. Test Mode Tab** – Used to test the S.O.S. function on your SPOT device without alerting search and rescue services
- **Third Party GPS Forwarding Tab** – Used to Enable/Disable and configure the forwarding of your coordinates to a 3rd party application or web service
- **Duplicate Settings Tab** – Used to copy Contact, Message Profiles and Navigation settings between SPOT X devices on the same account
- **Movement Alerts Tab** – Used to Enable/Disable and configure Movement Alert Messages
- **S.O.S. Tab** – Used to change Primary and Secondary Emergency Contact information
- **My Contacts Tab** – Used to create contacts and contact groups – SPOT X can have up to 70 contacts residing on the device
- **Social Media Tab** – Used to link the SPOT X to social media accounts
- **Message Blocker Tab** – Used to control who can send messages to the SPOT X – Defaults to Accept All
- **SPOT S.O.V. Tab** – Used to edit your S.O.V. contact phone numbers
- **Predefined Messages Tab** – Used to create predefined messages that can be sent at no cost from the SPOT X – Up to 14 predefined messages can be stored on the SPOT X
- **Check In Tab** – Used to create and configure a free message to be sent to up to 10 recipients when Check In/OK is selected on the SPOT X
- **Undelivered Message Notification Tab** – Used to enable/disable undelivered message notifications – If the SPOT X is turned off, incoming messages will not be delivered, enabling this feature will send an email notification allowing for the viewing of these messages
- **Waypoints Tab** – Used to create and edit waypoints to easily sync to the SPOT X

DEVICE SETTINGS	
Device Name - SPOT X	+
Tracking - 10 Minutes	+
S.O.S. Test Mode - Disabled	+
Third Party GPS Forwarding - Disabled	+
Duplicate Settings	+
Movement Alerts - Enabled	+
CONTACT SETTINGS	
S.O.S.	+
My Contacts	+
Social Media	+
Message Blocker	+
SPOT S.O.V.	+
MESSAGE PROFILE SETTINGS	
Predefined Messages	+
Check In	+
Undelivered Message Notification	+
NAVIGATION SETTINGS	
Waypoints	+

DEVICE NAME TAB

Give a unique name to the SPOT X. For accounts with multiple SPOT X's or other SPOT devices, giving a unique name to the device will make it easier to identify and select the SPOT X.

Simply enter a new name in the **Name** field and select **Save**.



The screenshot shows a web interface for "DEVICE SETTINGS". A modal window titled "Device Name - SPOT X" is open. Inside the modal, the "Device Name" is currently "SPOT X". Below this, there is a label "Enter New Name:" followed by a text input field containing "SPOT X". At the bottom of the modal is a "SAVE" button.

TRACKING TAB

The **Tracking** Tab displays the Tracking and Message Fetching intervals in accordance with the current purchased SPOT X Service Plan. Bolded intervals indicate available intervals and grayed out intervals indicate intervals that are not currently available.

Tracking and Message Fetching intervals are configured directly on the SPOT X.

DEVICE SETTINGS

Device Name - SPOT X +

Tracking - 10 Minutes -

Tracking and Message Fetching

Tracking allows for friends and family to track your progress in near real-time with SPOT Shared Views. SPOT Shared Views utilizes the SPOT Mapping platform, giving friends and family a virtual breadcrumb trail of your adventure.

Tracking and Message Fetching settings can only be configured directly on the SPOT X device. If you would like to change your Tracking interval and/or Message Fetching rate, please do so directly on the SPOT X device. Syncing your SPOT X with your SPOT My Account is not required for changes to take place.

Available Intervals

The Tracking and Message Fetching interval(s) displayed below are available in accordance with your purchased service plan.

☐ every 2.5 minutes

☐ every 5 minutes

☒ every 10 minutes

☐ every 30 minutes

☐ every 60 minutes

Additional Tracking & Message Fetching

If you would like to take advantage of additional tracking intervals & Message Fetching rates, you can do so by contacting [Customer Relations](#) and upgrading your service plans.

[Learn More About SPOT X Service Plans](#)

S.O.S. TEST MODE TAB

The **S.O.S. Test Mode** Tab allows you to test the S.O.S. function on your SPOT without alerting the emergency response center.

S.O.S. Test Mode - Disabled

S.O.S. Test Mode
S.O.S. Test Mode allows you to test the S.O.S. function on your SPOT without alerting the emergency response center.

- S.O.S. Test Mode is active until you manually disable Test Mode or the 0-minute test duration expires.
- S.O.S. Test Messages will be shown in [SPOT Mapping](#) and delivered to the email address entered for this S.O.S. Test.

If you need assistance with this process, please contact Customer Relations at (866) 651-7768.

Before you begin
As a precaution, inform your emergency contact listed on My Account that you will be testing S.O.S.

To test the S.O.S. function on your SPOT

- Step 1: Enable S.O.S. Test Mode by clicking the Enable button on this page.
- Step 2: Go outside where there is clear view of the sky and orient the [antenna](#) toward the sky. [Power On S.O.S.](#)
- Step 3: Verify that you have received an Email Alert for your S.O.S. within a few minutes of starting S.O.S. on your SPOT.
- Step 4: [Cancel S.O.S.](#) and [Power Off your SPOT](#).
- Step 5: Disable S.O.S. Test Mode by clicking on the Disable button on this page.

Important: You must power off your SPOT before the 0-minute testing period expires.
If not powered off, SPOT will continue sending S.O.S. and the emergency response center will be alerted. You will be responsible for any charges related to rescue activities.

ENABLE

TO TEST THE S.O.S. FUNCTION ON THE SPOT X

1. Enable S.O.S. Test Mode by clicking the **Enable** button on this page.
2. Go outside where there is clear view of the sky and orient the antenna toward the sky. Power On S.O.S.
3. Verify that you have received an Email Alert for your S.O.S. within a few minutes of starting S.O.S. on your SPOT.
4. Cancel S.O.S. and Power Off your SPOT.
5. Disable S.O.S. Test Mode by clicking on the Disable button on this page.

IMPORTANT: You must power off your SPOT before the 60-minute testing period expires.

If not powered off, SPOT will continue sending S.O.S. and the emergency response center will be alerted. You will be responsible for any charges related to rescue activities.

THIRD PARTY GPS FORWARDING TAB

Third Party GPS Forwarding sends the SPOT X's GPS coordinates to a designated third-party web-based application; by default this ability is disabled.


If a third party application provider has partnered with SPOT:

1. Request the Third Party Identification Code from your third party provider.
2. Enter the Third Party Identification Code in the Third Party field.
3. Select **Enable**.

DEVICE SETTINGS	
Device Name - SPOT X	+
Tracking - 10 Minutes	+
S.O.S. Test Mode - Disabled	+
Third Party GPS Forwarding - Disabled	-
<div>Third Party GPS Forwarding</div> <div>Forward a third party web-based application your GPS coordinates generated by your SPOT device</div> <div>Third Party Access is Disabled.</div> <div>Enter a Third Party Identification Code. This code can be provided by your third party provider.</div> <div>Enter a Third Party Identification Code. This code can be provided by your third party provider.</div> <div>ENABLE</div>	

DUPLICATE SETTINGS TAB


The Duplicate Settings tab allows for the copying and transferring Contact, Message and Navigational settings between SPOT X devices within My Account.

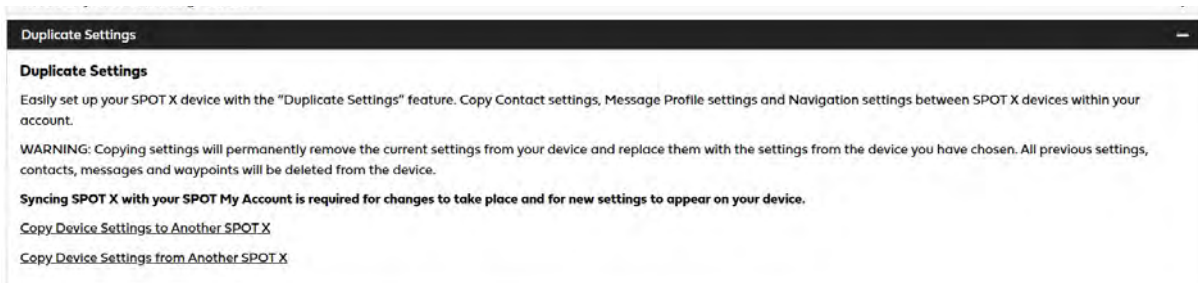

COPY DEVICE SETTINGS TO ANOTHER SPOT X


1. Select **Copy Device Settings to Another SPOT X** and the Copy Device Settings to Another SPOT X popup will be displayed.
2. In the **Settings** section, select the settings to be copied.
3. In the **Copy to** section, select the SPOT X to copy the settings to and click on **Copy**.
4. Sync the SPOT X with My Account.

NOTE: All settings selected will copy over previous settings in the selected SPOT X.

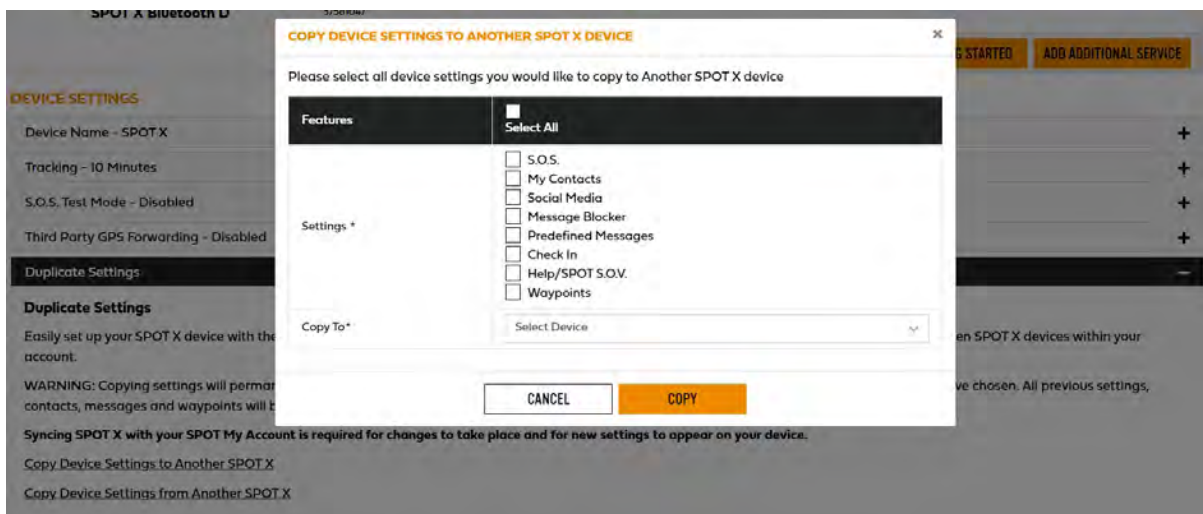

MOVEMENT ALERTS TAB


The **Movement Alerts tab** allows for the configuration of the movement notification alerts when the SPOT X vibration sensor detects new movement.

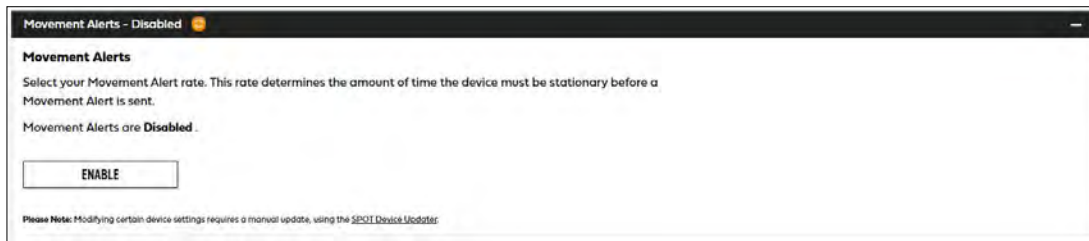

The screenshot shows a window titled "Movement Alerts - Disabled" with a yellow warning icon. Inside, the "Movement Alerts" section explains that the alert rate determines the stationary time before an alert. It states "Movement Alerts are Disabled" and features an "ENABLE" button. A "Please Note" at the bottom mentions that certain settings require a manual update using the SPOT Device Updater.

CONFIGURING MOVEMENT ALERTS

1. Click **Enable** and the **Movement Alerts** tab will expand displaying more information.
2. Select the amount of time the SPOT X must be stationary before a Movement Alert will be sent.
3. In the **Message to Send** field, enter the message to be sent when a Movement Alert is initiated.
4. Select **Add Email** and/or **Add Mobile Number** and either an **Email** or **Mobile Number** popup will be displayed.
5. Enter the appropriate Email or Mobile Number and click **Save**.
6. Repeat Step 5 for additional recipients (up to 10 recipients).

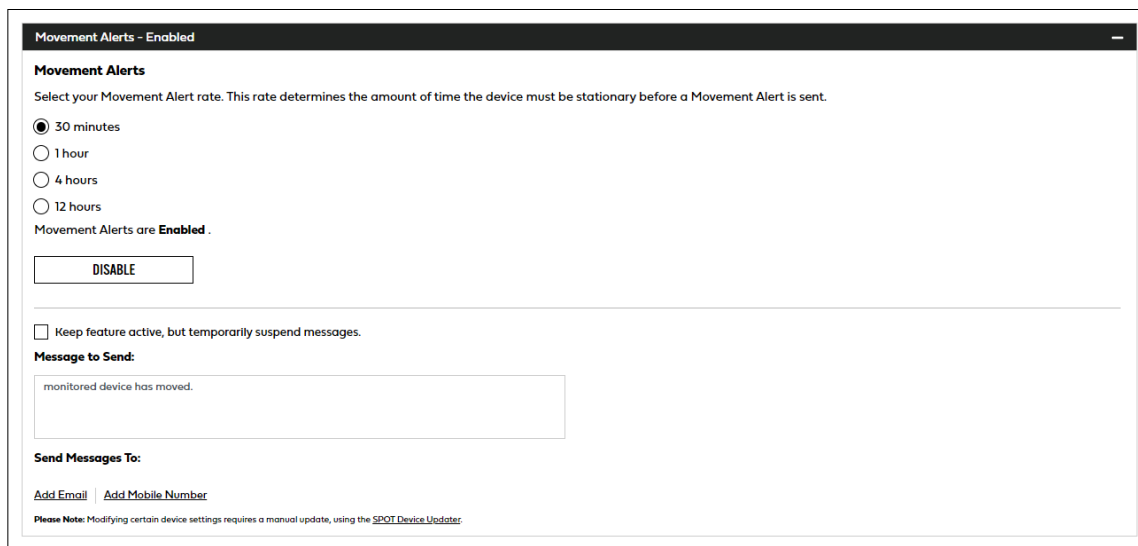

The screenshot shows the "Movement Alerts - Enabled" window. It allows selecting an alert rate from radio buttons: 30 minutes (selected), 1 hour, 4 hours, and 12 hours. It states "Movement Alerts are Enabled" and has a "DISABLE" button. There is a checkbox for "Keep feature active, but temporarily suspend messages." The "Message to Send:" field contains "monitored device has moved." Below, the "Send Messages To:" section has links for "Add Email" and "Add Mobile Number". A "Please Note" at the bottom states that certain settings require a manual update using the SPOT Device Updater.

S.O.S. TAB

While S.O.S. is active, 2-way communication with the emergency response center is available directly from your SPOT X.

The S.O.S. Tab is used to change your **Primary** and **Secondary Emergency Contact** names and telephone numbers that Search & Rescue contacts when an S.O.S. is initiated.

The Primary Emergency Contact information must be different from the Secondary Emergency Contact information. This is required to provide the emergency response center with additional points of contact in case of an S.O.S./911 emergency.

CONTACT SETTINGS

S.O.S.

S.O.S.

Activate S.O.S. mode directly on your SPOT X device to begin communicating 2-Way, and sending alerts directly to the search and rescue coordination center.

FocusPoint International, Inc will notify the appropriate emergency responders based on the SPOT X's GPS location and your emergency situation. Responders may include local police, Coast Guard, or Search and Rescue teams.

IMPORTANT NOTICE: S.O.S. MODE SHOULD ONLY BE USED DURING LIFE THREATENING EMERGENCIES. SENDING FALSE S.O.S. MESSAGES MAY SUBJECT YOU TO LIABILITY FOR ADDITIONAL CHARGES.

The ability to send S.O.S. alerts, make S.O.S. voice calls and send text messages to the search and rescue coordination center is covered under your basic SPOT Service Plan. However, you are responsible for all expenses related to your rescue unless you purchase the Search and Rescue Benefit.

[Learn more about the Search & Rescue Benefit](#)

☐ Check this box if the user of this SPOT device is someone other than yourself. Please provide their contact information.

ⓘ Provide additional information if there is anything the search and rescue coordination center would need to know about you (i.e. Medical conditions, allergies, prescriptions, etc.)

I am allergic to penicillin, a diabetic and on blood thinner medication

-or-

Itinerary for trip

5 day hike taking the southern trail

Plan to start at Four peak gorge covering 10 miles a day with overnight camping

Group of 5

Should arrive at Valley Soruk by the evening of day 5

The Primary and Secondary Emergency Contacts must be different from one another. The Primary and Secondary Emergency Contacts' phone numbers must be different from the account holder's phone number(s) entered when registering this device. This is required to provide the emergency response coordination center with additional points of contact in an S.O.S. emergency

Your Primary Emergency Contact

Full Name *

Jane Smith

Country *

United States of America

Phone Number *

9857659905

MY CONTACTS TAB

This feature allows you to create contacts and contact groups and sync your contacts to your SPOT X device using My Account. Your SPOT X can hold up to 70 contacts, including contact groups. A separate contact will be created based off of the contact type entered, so if an email address & a phone number is added for a single person, that person will count as two contacts instead of one. Each contact group can hold up to 10 contacts. When sending a message from your SPOT X, only 10 individual contacts or 1 contact group can be selected per message.

My Contacts

Create contacts and contact groups, sync your contacts to your SPOT X device and save time and message characters.

SPOT X can hold up to 70 contacts and/or contact groups. Individual contacts can either be manually added to or deleted from the SPOT X device on the fly or via SPOT My Account and synced to the SPOT X by using the SPOT X Firmware Updater.

Syncing SPOT X with SPOT My Account is required for contacts and contact groups to appear on your device.

[Create New Contact](#) | [Create New Contact Group](#) | [Delete multiple contacts?](#)

- Contacts Synced: 0
- Contacts Selected to Sync: 0 / 0 (70 max)

SAVE

Search

<input type="checkbox"/> Select All	Contact Name	Contact Type	Actions
No contacts found			

CREATE NEW CONTACT

1. Select **Create New Contact** and the **Add a New Contact** popup will be displayed.
2. Enter the appropriate information and select **Save**. If both Email Address and Mobile Number fields are filled in, two contacts will be created, one for Email and one for Text. You must select the country code and include the area code before saving a contact phone number.
3. The new contact will be displayed in the **Contact Name** field.

ADD A NEW CONTACT

☒ Sync

First Name* Susan

Last Name* Miller

Email Address susanb@myemail.com

Phone Number United States of America +1

5863694458

- Choose Country Code
- Enter Mobile Number
Example: 4085551212

CANCEL **SAVE**

CREATE NEW CONTACT GROUP

1. Select **Create New Contact Group** and the **Add a New Contact Group** popup will be displayed.
2. Enter the Group Name, select up to 10 contacts, and select **Save**.
3. The new contact group will be displayed in the **Contact Name** field.

ADDING CONTACTS TO THE SPOT X


Syncing SPOT X with **SPOT My Account** is required for contacts and contact groups to appear on your device.

1. In the **Contact Name** field, select a contact by clicking on the appropriate checkbox – up to 70 contacts can be selected.
2. Select the contacts that you would like to sync by clicking on the checkbox next to the contact (up to 70 contacts can be synced) and select **Save**.
3. A green banner will be displayed at the top of the screen.
4. Sync the SPOT X with **My Account**.
5. Sync & update your device using the **SPOT X Firmware Updater**.

DELETING CONTACTS

Syncing SPOT X with **SPOT My Account** is required for contacts and contact groups to be removed from your device.

1. In the **Contact Name** field, select Delete next to the name you want to remove.
2. A pop-up message will display asking to confirm the action requested.
3. A green banner will be displayed at the top of the screen.
4. Sync the SPOT X with **My Account**.
5. Sync & update your device using the **SPOT X Firmware Updater**.

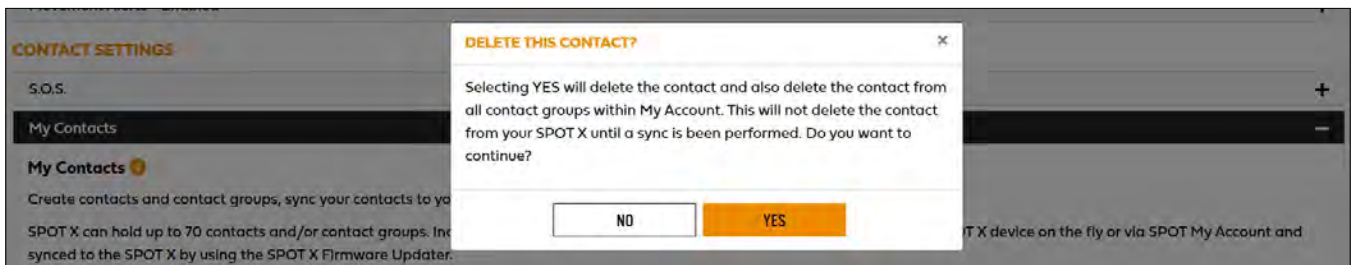


SOCIAL MEDIA TAB

The **Social Media** tab is used to link your social media accounts with the SPOT X. Once you've linked your accounts you will be able to send 140 character updates to those accounts from your SPOT X at any time.


TWITTER

1. In the **Twitter** section, click on **Link**.
2. Follow all on-screen directions.

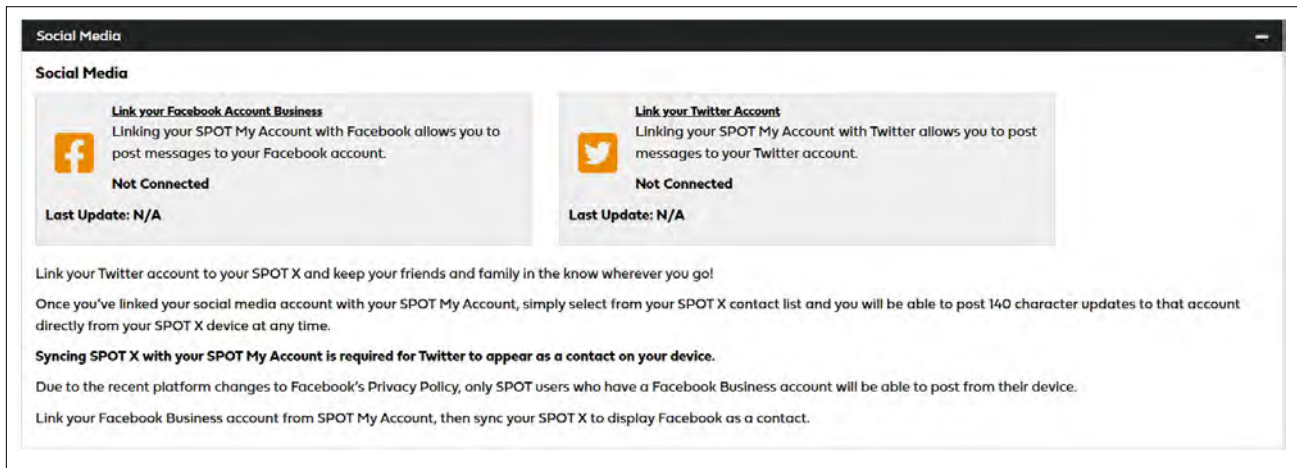

MESSAGE BLOCKER TAB

By updating these settings, you can easily control who you receive messages from.

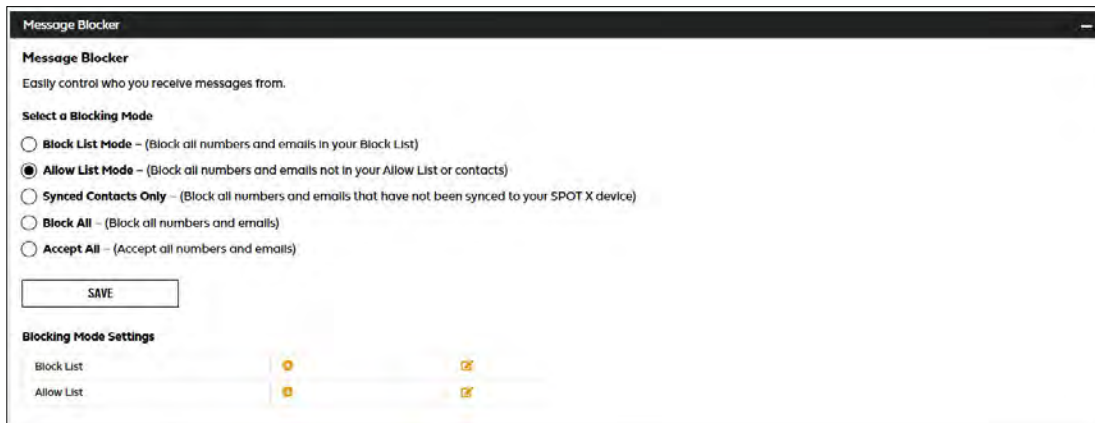


The screenshot shows the 'Message Blocker' settings interface. At the top, it says 'Message Blocker' and 'Easily control who you receive messages from.' Below this is a section titled 'Select a Blocking Mode' with five radio button options: 'Block List Mode' (Block all numbers and emails in your Block List), 'Allow List Mode' (selected, Block all numbers and emails not in your Allow List or contacts), 'Synced Contacts Only' (Block all numbers and emails that have not been synced to your SPOT X device), 'Block All' (Block all numbers and emails), and 'Accept All' (Accept all numbers and emails). A 'SAVE' button is located below these options. At the bottom, there is a 'Blocking Mode Settings' section with two rows: 'Block List' and 'Allow List', each with a plus icon and a minus icon.

SELECTING A BLOCKING MODE

1. Select the appropriate blocking mode:
 - **Block List Mode** – Blocks only incoming messages listed in the block list
 - **Allow List Mode** – Blocks all incoming messages that are not on your allow list or listed as a contact in My Account
 - **Synced Contacts Only** – Block all numbers and emails that have not been synced to your SPOT X device
 - **Block All** – Blocks all incoming messages
 - **Accept All** – Accept all incoming messages
2. Click **Save**.


ADD TO THE BLOCK LIST


1. In the Blocking Mode section, select **+** and the **Add to Block List** popup will be displayed.
2. Enter the Mobile # or Email address you wish to block, along with an associated name, and click **Save**.

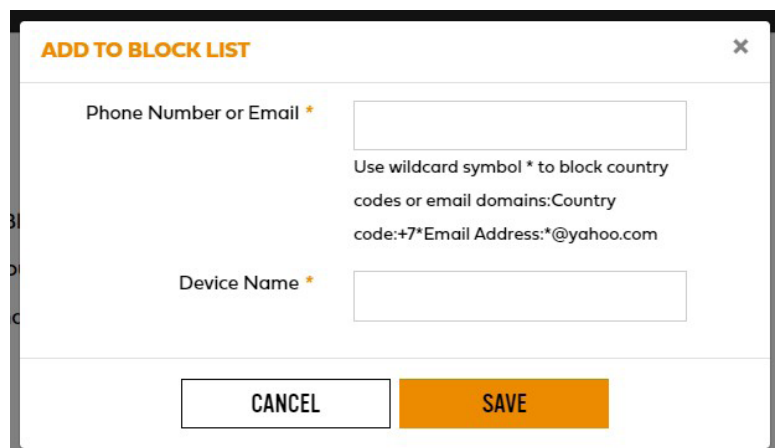

The screenshot shows the 'ADD TO BLOCK LIST' popup. It has a title bar with the text 'ADD TO BLOCK LIST' and a close button. The main content area has two input fields: 'Phone Number or Email *' and 'Device Name *'. Below the first input field, there is a note: 'Use wildcard symbol * to block country codes or email domains: Country code: +7*Email Address: *@yahoo.com'. At the bottom, there are two buttons: 'CANCEL' and 'SAVE'.

ADD TO THE ALLOW LIST

1. In the Blocking Mode section, select  and the **Add to Allow List** popup will be displayed.
2. Enter the Mobile # or Email address you wish to add, along with an associated name and click **Save**.

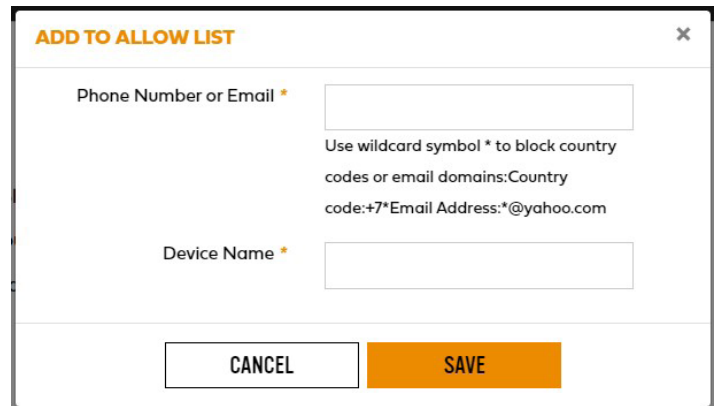

ADD TO ALLOW LIST ×


Phone Number or Email *


Use wildcard symbol * to block country codes or email domains: Country code: +7* Email Address: *@yahoo.com

Device Name *

CANCEL **SAVE**

DELETE FROM THE BLOCK LIST

1. In the Blocking Mode section, select  and the **Delete from Block List** pop-up will be displayed.
2. Check the boxes of the contacts you wish to remove from the block list and click **Delete**.
3. Another pop-up will ask you to confirm your selection.

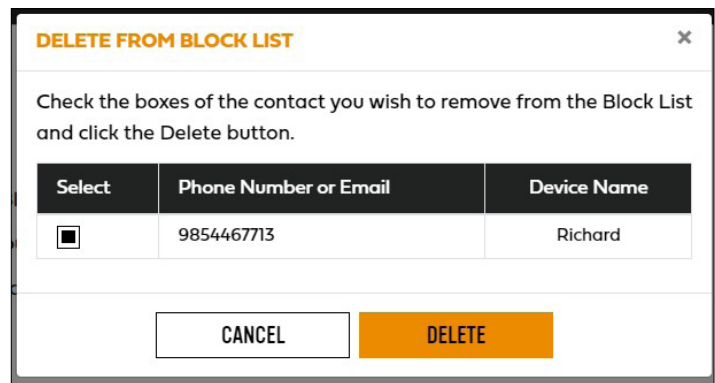


DELETE FROM BLOCK LIST ×


Check the boxes of the contact you wish to remove from the Block List and click the Delete button.

Select	Phone Number or Email	Device Name
<input checked="" type="checkbox"/>	9854467713	Richard

CANCEL **DELETE**

DELETE FROM THE ALLOW LIST

1. In the Blocking Mode section, select  and the **Delete from Allow List** pop-up will be displayed.
2. Check the boxes of the contacts you wish to remove from the Allow List and click **Delete**.
3. Another pop-up will ask you to confirm your selection.

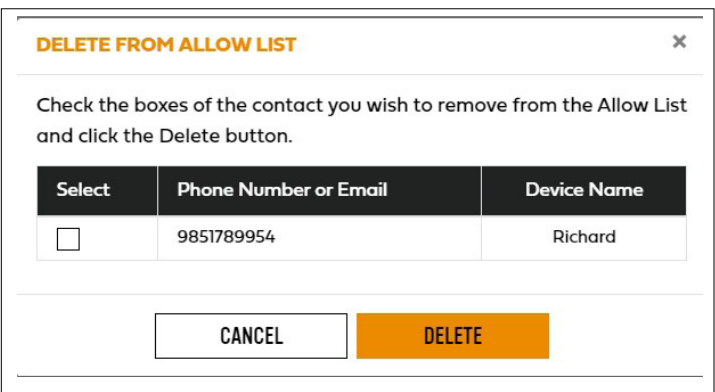

DELETE FROM ALLOW LIST ×

Check the boxes of the contact you wish to remove from the Allow List and click the Delete button.

Select	Phone Number or Email	Device Name
<input type="checkbox"/>	9851789954	Richard

CANCEL **DELETE**


SPOT S.O.V. (SAVE OUR VEHICLE)

SPOT S.O.V. is our 24/7 vehicle assistance feature that gets help for you and your car, SUV, ATV, RV, trailer or motorcycle. It doesn't matter how far off the grid you go or even if you have zero bars of cell service, you can count on us to get you out of a jam.

SPOT has partnered with Nation Safe Drivers (NSD) to provide a vehicle assistance program like no other.

NSD is one of the largest suppliers of towing and roadside assistance, even on the most obscure and hard to travel roads imaginable. It doesn't matter if the roads are paved, dirt or gravel, NSD partners will be there to save your vehicle.

SPOT S.O.V. is an additional service offered for as low as \$30.00 per year that allows you to send your GPS locations to NSD so you can be located quickly.

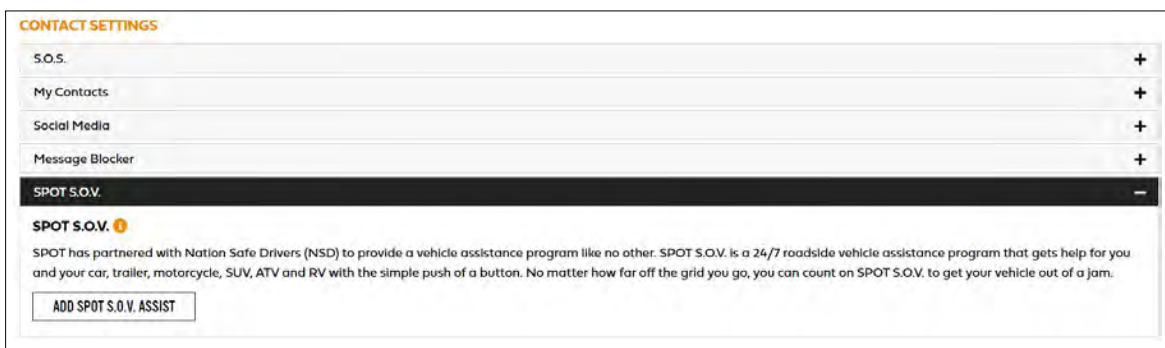

SPOT S.O.V. ASSIST FEATURES

- Up to 5 tows per year
- Up to 50 miles each tow
- Winching/Extrication Services
- Accident assistance
- Gas & oil delivery
- Emergency tire service
- Emergency battery service
- Lost key and lockout service
- Service is available in 50 U.S. states, as well as Puerto Rico, Washington, D.C. and Canada

PREDEFINED MESSAGES TAB

Make texting even easier by sending a Predefined Message. Send an unlimited number of Predefined Messages to your contacts at no cost.

Up to 14 Predefined Messages can be created and stored on your SPOT X device so you can quickly update your friends and family. Each message can be up to 140 characters in length.

NOTE: Syncing your SPOT X with SPOT My Account is required for the changes to reside on your SPOT X.

MESSAGE PROFILE SETTINGS

Predefined Messages

Stay in touch even easier by sending a Predefined Message.

Predefined Messages will not be deducted from your plan's allotted messages. Incoming responses to Predefined Messages however will count as a regular received message and will be deducted from your plan's allotted messages (with the exception of incoming messages from search and rescue services and SPOT 5.O.V.).

Up to 14 Predefined Messages can be created and stored on your SPOT X device so you can quickly update your friends and family. Each message can be up to 140 characters in length.

Syncing SPOT X with your SPOT My Account is required for Predefined Messages to appear on your device.

[Create a New Predefined Message](#) | [Delete Multiple Predefined Messages](#)

- Predefined Messages Synced: 14
- Predefined Messages Selected to Sync: 14/14 (14 max)

SAVE

<input type="checkbox"/> Select All	Predefined Messages		
<input type="checkbox"/>	Making camp for the night, I will touch base with you in the morning.		
<input type="checkbox"/>	The weather is getting bad. We are making shelter.		
<input type="checkbox"/>	Starting my adventure now. Wish me luck!		
<input type="checkbox"/>	Running behind schedule. Will message you again soon.		
<input type="checkbox"/>	Having the time of our life, our trip has been great!		
<input type="checkbox"/>	I'm going to be late, but don't worry, I'm ok.		
<input type="checkbox"/>	I've made it to the car and heading home now.		
<input type="checkbox"/>	Hello		
<input type="checkbox"/>	Delayed, postpone pick up by one day.		
<input type="checkbox"/>	I have started tracking-follow my progress on my share page.		
<input type="checkbox"/>	OK		
<input type="checkbox"/>	I am safe and staying here for the night.		
<input type="checkbox"/>	Need assistance, not life threatening, send help to these coordinates.		
<input type="checkbox"/>	Love you. Will check in again with you soon.		

CREATING A PREDEFINED MESSAGE

1. Select **Create a New Predefined Message** and the **Create a New Predefined Message** popup will be displayed.
2. In the Message field, enter a maximum of 140 character message and click **Save**.

CREATE A NEW PREDEFINED MESSAGE

☒ Sync

(Message maximum 140 characters)

CANCEL **SAVE**

DELETING A PREDEFINED MESSAGE


1. In the Predefined Message section, Select next to the message to be edited and the **Delete this Message** popup will be displayed.
2. Select **Yes** to Delete.

DELETE THIS MESSAGE?

Are you sure you want to delete the selected message(s)?

NO **YES**

EDITING A PREDEFINED MESSAGE

1. In the Predefined Message section, select  next to the message to be edited and the **Edit/View a Predefined Message** popup will be displayed.
2. In the Message field, edit the Predefined Message and click **Save**.

SYNCING PREDEFINED MESSAGES TO THE SPOT X

Syncing SPOT X with your **SPOT My Account** is required for Predefined Messages to appear on your device.

1. Select the Predefined Messages that you would like to sync to your SPOT X device by clicking on the appropriate checkbox(s), click **Save**. Up to 14 Predefined Messages can be selected.
2. Sync the SPOT X with **My Account**.

Predefined Messages

Predefined Messages

Stay in touch even easier by sending a Predefined Message.

Predefined Messages will not be deducted from your plan's allotted messages. Incoming responses to Predefined Messages however will count as a regular received message and will be deducted from your plan's allotted messages (with the exception of incoming messages from search and rescue services and SPOT S.O.V.).





























Up to 14 Predefined Messages can be created and stored on your SPOT X device so you can quickly update your friends and family. Each message can be up to 140 characters in length.

Syncing SPOT X with your SPOT My Account is required for Predefined Messages to appear on your device.

[Create a New Predefined Message](#) [Delete Multiple Predefined Messages](#)

- Predefined Messages Synced: 14
- Predefined Messages Selected to Sync: 14/14 (14 max)

SAVE

<input type="checkbox"/> Select All	Predefined Messages		
<input type="checkbox"/>	Love you. Will check in again with you soon.		
<input type="checkbox"/>	Making camp for the night, I will touch base with you in the morning.		
<input type="checkbox"/>	The weather is getting bad. We are making shelter.		
<input type="checkbox"/>	Starting my adventure now. Wish me luck!		
<input type="checkbox"/>	Running behind schedule. Will message you again soon.		
<input type="checkbox"/>	Having the time of our life, our trip has been great!		
<input type="checkbox"/>	I'm going to be late, but don't worry, I'm ok.		
<input type="checkbox"/>	I've made it to the car and heading home now.		
<input type="checkbox"/>	Hello		
<input type="checkbox"/>	Delayed, postpone pick up by one day.		
<input type="checkbox"/>	I have started tracking-follow my progress on my share page.		
<input type="checkbox"/>	OK		
<input type="checkbox"/>	I am safe and staying here for the night.		
<input type="checkbox"/>	Need assistance, not life threatening, send help to these coordinates.		

CHECK IN TAB

Check In with friends and family by quickly sending a pre-programmed message and/or email along with your GPS coordinates to up to 10 contacts at no cost to you. The Check In message will include a link to a map showing the SPOT X's location. The Check In feature cannot be used unless it is setup before going on your adventure off the grid. A default message will be used unless a custom message is set up.

The Check In message can be created and assigned to contacts via **SPOT My Account** at any time.

CONFIGURING THE CHECK IN MESSAGE


1. In the Message to **Send** field, enter the Check In/OK message to send.
2. Select **Add Email** and/or **Add Mobile Number**, enter the appropriate contact information, and click **Save**.
3. Repeat Step 2 for additional recipients (up to 10).
4. Click **Save**.


NOTE: The messages can also be posted to your social media accounts.

The screenshot shows a web interface titled "Check In". It contains the following elements:

- Check In** header.
- Introductory text: "Check in with friends and family by quickly sending a pre-programmed message and/or email along with your GPS coordinates to up to 10 contacts at no cost to you. The Check In message will include a link to Google Maps™ containing the SPOT X's location."
- Disclaimer: "Check in messages will not be deducted from your plan's allotted messages. Incoming responses to Check In messages, however, will count as a regular received message and will be deducted from your plan's allotted messages."
- Message to Send:** A text input field containing "All is well!". Below the field is a character count: "(99 characters remaining)".
- SAVE** button.
- Send Messages To:** A section with a checkbox for "Twitter". Below it, there are two rows of contact information:
 - Row 1: "myemail@test.com" with a checkmark icon and a delete icon.
 - Row 2: "9859663844" with a checkmark icon and a delete icon.
- At the bottom, there are links for **Add Email** and **Add Mobile Number**.


EDITING AN EMAIL ADDRESS OR MOBILE NUMBER

1. In the Check In section, select  next to the email or mobile number to be edited and the **Edit the Mobile Number** or **Email Address** popup will be displayed.
2. In the Mobile Number or Email Address field, edit the information and click **Save**.

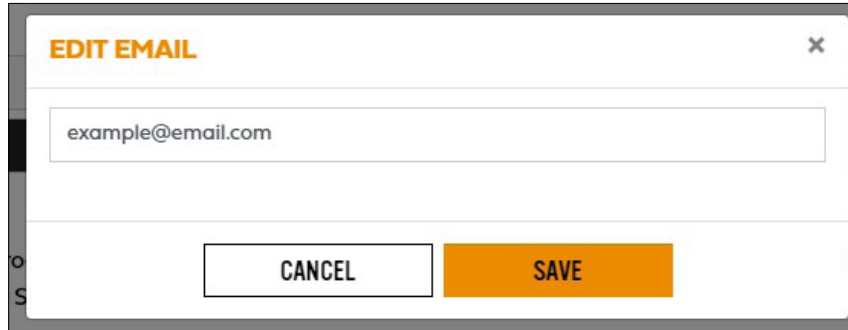

The screenshot shows a modal window titled "EDIT EMAIL" with a close button (X) in the top right corner. Inside the modal, there is a text input field containing the email address "example@email.com". Below the input field, there are two buttons: a "CANCEL" button and a "SAVE" button. The "SAVE" button is highlighted in orange.

DELETING AN EMAIL ADDRESS OR MOBILE NUMBER

1. In the Check In, section, select  next to the **Email or Mobile number** to be removed.
2. Click **Yes** to Delete the **Email or Mobile Number**.

UNDELIVERED MESSAGE NOTIFICATION TAB

If the SPOT X is turned off or has not communicated with the SPOT Satellite Network, incoming messages will not be delivered. All incoming messages will be queued for up to 72 hours from the time they were sent and will only be delivered if the SPOT X is turned on and has a satellite connection. If the SPOT X remains turned off, all queued messages will not be delivered and permanently deleted.

To receive these emails before they are deleted, select **Enable** and the messages will be delivered to the email address displayed.

To change the email address:

1. Select the email address field and enter a new email address.
2. Click **Save**.

Undelivered Message Notification

Undelivered Message Notification


While SPOT X is powered off or has not communicated with the SPOT Satellite Network, incoming messages will not be delivered to your device. All incoming messages will be queued for up to 72 hours from the time they were sent and will only be delivered if your SPOT X device turns back on within that time period. After 72 hours, if the SPOT X device has not powered on, all queued messages will be deleted permanently and will not be delivered to your SPOT X device.

If you would like the messages to be sent to an email address other than the admin email address, please select the Enable button below, enter the email address and select Save.

ENABLE


WAYPOINTS TAB

The Waypoints tab is used to mark important locations or points of interest to navigate to using the SPOT X. Waypoints can easily be created and loaded on to the SPOT X.

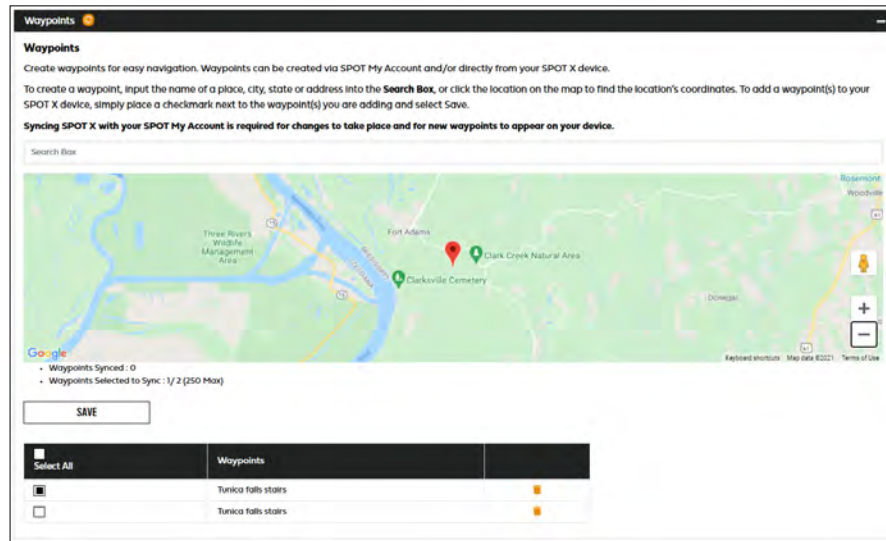


CREATING A WAYPOINT

1. Zoom to the specific area on the map where you want to create a waypoint for. Left click and the Create Waypoint popup will be displayed.
2. The Latitude, Longitude and Elevation will be displayed. In the Name field, enter a name for the Waypoint.
3. In the Notes field, enter any pertinent information.
4. Click **Save**.

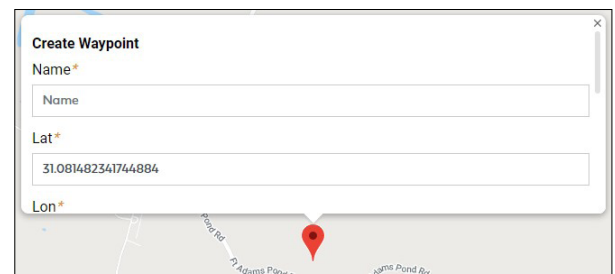

DELETING A WAYPOINT

1. In the Waypoints section, Select  next to the waypoint and a green banner will be displayed at the top of the screen confirming the Waypoint was deleted successfully.


SYNCHING WAYPOINTS TO THE SPOT X

1. In the Waypoints section, select Waypoints by clicking on the appropriate check box.
2. Select **Save** to save the Waypoints settings.
3. Sync the SPOT X with My Account.

MY ACCOUNT – MAPS

TRACKING

SPOT Tracking provides an easy way to share your outdoor adventures and is also a great safety feature. To view the tracks made while using the SPOT X, simply click on the Maps tab.

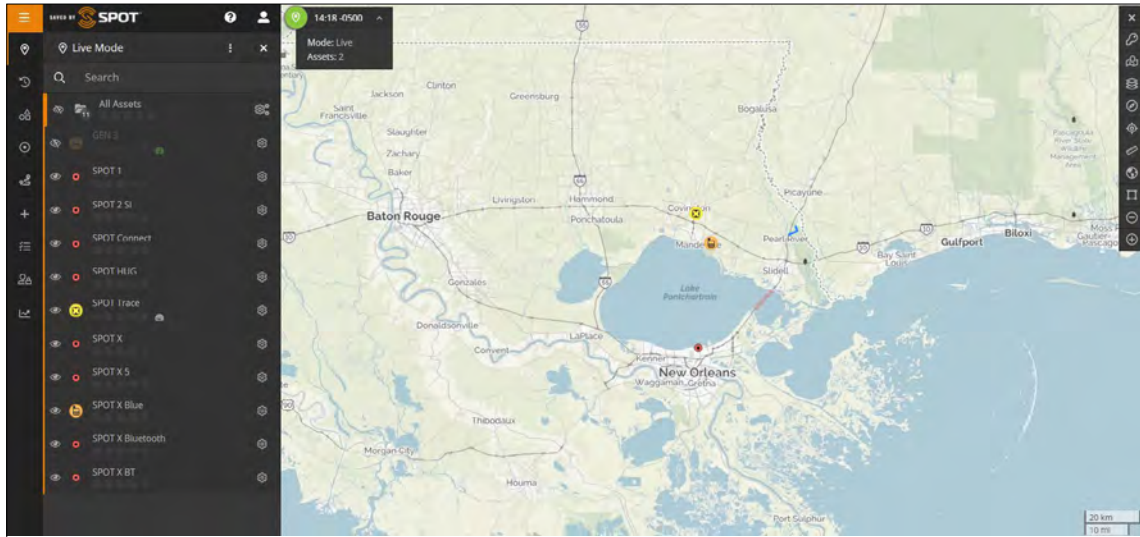










MY ACCOUNT – SETTINGS & BILLING

OVERVIEW

The Settings & Billing page

- **User Settings** – Select Update to change username, password, time zone, preferred languages.
- **Customer Pin** – Select Edit to view and manage customer pin.
- **Customer Information** – Select Update to change the primary contact information.
- **Monitor Message Usage** – Select View to access the message usage per device.
- **Billing & Payments** – Select View to access the billing and payment history.
- **Manage Maps** – Select Manage to unlock more features by upgrading your SPOT Mapping tier.
- **XML Feed** – Select View/Edit to create a XML/JSON data feed.
- **Service Cancellation** – Select Cancel to deactivate the SPOT Subscription.

 USER SETTINGS Update your account username, password, time zone, preferred language. UPDATE	 CUSTOMER PIN View and Manage Customer PIN Account Number <input type="text" value="ACD0357348"/> Customer PIN# <input type="text" value="3304"/> EDIT
 CUSTOMER INFORMATION Use this page to update your primary contact information. This includes information provided to emergency services. UPDATE	 BILLING & PAYMENTS View billing and payment history. VIEW
 MONITOR MESSAGE USAGE View your message usage per device. VIEW	 CREDIT CARD INFORMATION Keep your credit card information up to date to ensure there are no interruptions to your SPOT service. VIEW/EDIT
 MANAGE MAPS Unlock more features by upgrading your SPOT mapping tier. MANAGE	 XML FEED Create a XML/JSON data feed. VIEW/EDIT
 SERVICE CANCELLATION Click Cancel to Deactivate SPOT Subscription CANCEL	

SPOT X MESSAGE USAGE

The SPOT X Message Usage section displays the following message usage information for the current billing period:

- **Device Name** – Displays the name of the SPOT X.
- **Messages Used** – Displays the current total text messages (sent & received) used and the maximum number of text messages allowed before overages will be incurred.

Example: 35/50 where 35 is the current total of text messages used and 50 is the maximum number allowed before overages will be incurred.

- **Message Sent** – Displays the total free-form texts sent by the SPOT X.
- **Message Received** – Displays the total texts received by the SPOT X.
- **Predefined Sent** – Displays the total Predefined Messages sent by the SPOT X. Sending Predefined Messages are free and do not count as free-form text messages.
- **Overage Total** – Displays the total cost of text messages that have exceeded the number of text messages allowed by the SPOT X Service Plan. The Overage Total will appear on your next invoice.
- **Next Billing Date** – Displays the date when the next billing cycle begins.

SPOT X MESSAGE USAGE						
Device Name	Message Used	Message Sent	Message Received	Predefined Sent	Overage Total	Next Billing Date
SPOT X	0/N/A	0	0	0	\$0.00	
BACK						

SYNCING SPOT X WITH MY ACCOUNT

To sync your SPOT X from My Account, visit [SPOT Firmware Updater](#) to download the latest firmware update.

1. Open the **SPOT X Device Updater**.
2. Log in with your My Account credentials.
3. Turn off your SPOT X.
4. Connect the USB cable to your SPOT X and plug into a USB port on your computer.
5. Click on **Connect**.
6. Click on **Sync**.
7. Once the Sync is finished, click **Disconnect**.



SPOT X FIRMWARE UPDATE

To perform an update on your SPOT X, visit [SPOT Firmware updater](#) to download the latest updater.

1. Open the **SPOT X Device Updater**.
2. Log in with your My Account credentials.
3. Turn off your SPOT X.
4. Connect the USB cable to your SPOT X and plug it to a USB port on your computer.
5. Click on **Connect**.
6. Click on **Update to Latest Firmware**.
7. Once the Update is finished, click **Disconnect**.

NOTE: Please do not disconnect the SPOT X while the firmware update or sync is in progress. Interrupting this process may cause your device to malfunction.

TROUBLESHOOTING:

If your SPOT X is acting abnormally, being unresponsive, or freezes up, firmly press and hold the **Select** and **Power Button** for 12 seconds until the user interface flashes off, then release the buttons. The SPOT X logo should be displayed on the screen.

NOTE: After 3 seconds of holding the Power Button, you will be asked if you want to power off. Disregard the message and continue to hold both buttons down.

SPOT X SPECIFICATIONS

HEIGHT	6.54"
WIDTH	2.9"
THICKNESS	0.94"
WEIGHT	7.0 oz
BATTERY TYPE	Rechargeable Lithium Polymer Battery
WATERPROOF RATING	IP67 – Tested for submersion in 1 meter of water for 30 minutes
IMPACT RESISTANCE	Mil-STD-810G for shock, IP67 for dust
OPERATIONAL TEMPERATURE	-4° F to 140° F (-20° C to +60° C)
STORAGE TEMPERATURE	-4° F to 140° F (-20° C to +60° C)
OPERATING ALTITUDE	-328 ft to 21,320 ft (-100 m to 6,500 m)

CERTIFICATIONS

FCC COMPLIANCE STATEMENT

FCC Interference Statement (Part 15.1059b)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC PART 15 CLAUSE 15.21 - DO NOT MODIFY WARNING:

"Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment"

FCC REGULATORY

FCC ID: L2V-SPOTXB

FCC regulatory information is accessible on the SPOTX (e-label). The steps to access the information is as follows:

- From the main (home) screen, click on **System Settings**
- From the System Settings screen, Click on **Regulatory Info**
- The regulatory screen appears with FCC and Canada regulatory information.

RÉGLEMENTATION DE LA FCC:

FCC ID: L2V-SPOTXB

Les informations réglementaires de la FCC sont accessibles sur le SPOTX (étiquette électronique). Veuillez suivre les étapes suivantes pour accéder à ces informations :

- Sur l'écran principal, cliquez sur Configurations du système.
- Sur l'écran de Configurations du système, cliquez sur Informations réglementaires.
- L'écran de réglementation apparaît avec les informations réglementaires de la FCC, et celles du Canada.

ISED RSS-GEN NOTICE

(1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

(1) l'appareil ne doit pas produire de brouillage; (2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

INDUSTRY CANADA CERTIFICATION

This Class B digital apparatus complies with Canadian ICES-003.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

CANADA REGULATORY

IC: 3989A-SPOTXB

CAN ICES-3(B)/NMB-3B

Canadian regulatory information is accessible on the SPOTX (e-label). The steps to access the information is as follows:

- From the main (home) screen, click on System Settings
- From the System Settings screen, Click on Regulatory Info
- The regulatory screen appears with FCC and Canada regulatory information.

RÉGLEMENTATION DU CANADA:

IC: 3989A-SPOTXB

CAN ICES-3(B)/NMB-3B

Les informations réglementaires du Canada sont accessibles sur le SPOTX (étiquette électronique). Veuillez suivre les étapes suivantes pour accéder à ces informations :

- Sur l'écran principal, cliquez sur Configurations du système.
- Sur l'écran de Configurations du système, cliquez sur Informations réglementaires.
- L'écran de réglementation apparaît avec les informations réglementaires de la FCC, et celles du Canada.

DECLARATION OF CONFORMITY FOR EUROPEAN CUSTOMERS

Hereby, SPOT LLC declares that this SPOT X, is in compliance with the Directive 2014/53/EU. The full text of the EU Declaration of Conformity may be consulted at **[FindMeSPOT.com/Regulatory](https://www.findmespot.com/regulatory)**.



Transmit frequencies: 1611.25, 1613.75, 1616.25 and 1618.75 MHz. (1610-1620 MHz) Bluetooth: 2402 – 2480 MHz











Maximum EIRP Satellite: 22.35 dBm

Rated Voltage: 5 VDC, Rated Maximum Current: 550mA

This device complies with the requirements for Radio Astronomy Site avoidance as specified by the Globalstar National Science Foundation agreement of 2001. It is compliant with CFR25.213.

This device automatically adjusts its transmission frequency according to its location and is compliant with international regulatory requirements.

GENERAL WARNINGS

-  **Warning – Modifications:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
-  **Warning – Internal Battery:** The rechargeable battery inside the SPOT X is not designed to be replaced by the consumer.
-  **Warning – Blasting Area:** To avoid interference with blasting operations, turn your SPOT X off when in a "Blasting Area" or in areas posted "Turn off two-way radio." Obey all signs and instructions.
-  **Warning – Potential Explosive Atmosphere:** Turn off the SPOT X when in any area with a potentially explosive atmosphere and obey all signs and instructions.
-  **Warning – Driving:** Always follow safe driving practices and local rules and regulations regarding the use of wireless devices while driving. Always park safely prior to sending or using the SPOT X.
-  **Warning – Pacemakers:** The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between the SPOT X and a pacemaker to avoid potential interference with the pacemaker.
-  **Warning – Hearing aids:** Some digital wireless devices may interfere with some hearing aids. In order to prevent such interference, you may want to consult the manufacturer of your hearing aid.
-  **Warning – Specific Absorption Rate (SAR):**
FCC / Canada: The SPOT X has been shown to be compliant to localized Specific Absorption Rate (SAR) for uncontrolled environment/ general exposure limits specified in ANSI/IEEE STD C95.1-1992 and has been tested in accordance with measurement procedure specified in IEEE 1528-2013 and IEC 62209-2:2010 using a separation distance of 0mm.
-  **Warning – Aircraft Use:** Keep the SPOT X at least 12 inches away from aircraft navigation systems or GPS antennas. SPOT X may interfere with the signal reception of GPS based devices, causing intermittent loss of GPS information and momentary operational disruptions.
-  **European Union (CE RED):** The SPOT X has been shown to be compliant for localized specific absorption rate (SAR) for uncontrolled environment / general exposure limits specified in ANSI/IEEE Std. C95.1-1999 and has been tested in accordance with the measurement procedures specified in EN50566:2017 and EN62209-2:2010 using a separation distance of 0 mm.

NOTE: If concerned about RF exposure during use, place the SPOT X anywhere it is not directly touching your body after functions have been activated. The RF exposure level drops off dramatically with distance from the SPOT X.

ADDITIONAL SPOT X SUPPORT

This SPOT X User Guide is based on the production version of SPOT X. Hardware and firmware changes may have occurred after this release. SPOT LLC reserves the right to make changes to technical and product specifications without prior notice.

Visit FindMeSPOT.com/SPOTXSupport to access the latest version of the SPOT X User Guide and for additional information on how to use SPOT X.



FindMeSPOT.com/SPOTX

SPOT X® is a registered trademark of Globalstar Inc.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by SPOT, LLC is under license.

All other trademarks and registered trademarks are properties of their respective owners.

© 2022 SPOT LLC. All Rights Reserved. All SPOT products described on FindMeSPOT.com are the products of SPOT LLC and its affiliates, which are not affiliated in any manner with SPOT Image of Toulouse, France or SPOT Image Corporation of Chantilly, Virginia.

SPOT LLC • 1351 Holiday Square Blvd. • Covington, LA 70433